


## Adafruit AM2320 Sensor

Created by lady ada

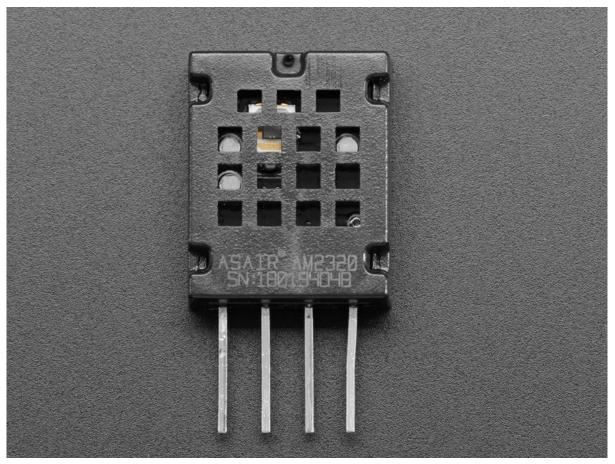


https://learn.adafruit.com/adafruit-am2320-temperature-humidity-i2c-sensor

Last updated on 2024-06-03 02:18:55 PM EDT

#### Table of Contents

Overview	3
Pinouts	4
Arduino Usage	4
Install Adafruit Sensor	
Download Adafruit_AM2320	
Load Demo	
Python & CircuitPython	7
CircuitPython Microcontroller Wiring	
Python Computer Wiring	
CircuitPython Installation of AM2320 Library	
Python Installation of AM2320 Library	
CircuitPython & Python Usage	
Full Example Code	
Python Docs	11

#### Overview

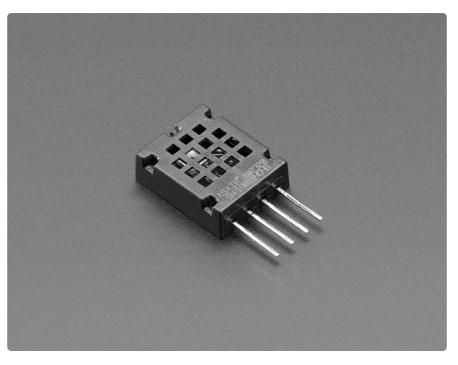


This little sensor looks an awful lot like the popular DHT11/DHT22 temperature and humidity sensors, but unlike classic DHT sensors, it has an I2C interface! That's right, you do not need to use a bit-bang timing-specific protocol to talk to the AM2320, it uses plain-old-I2C. Whew, that makes things a little easier, doesn't it?

**But!** We'll let you know, this sensor is not well documented like our other, fancier I2C temperature & humidity sensors. The datasheet mentions it has 3% humidity accuracy and 0.5C temperature accuracy, but we're not very trusting of the specifications. So, while this sensor does seem to work, it's not recommended for anything where you care about any sort of guaranteed accuracy. Temperature is probably correct to 2-3 degrees Celsius. Humidity is probably within 5-10%.

That said, for maker and IoT projects? You can't beat the simplicity and price! And we've got ready-to-go working Arduino and CircuitPython code to use it.

Each order comes with one AM2320, a low-cost temperature and humidity sensor. You just provide any microcontroller that can run our Arduino or CircuitPython library, and two I2C pull-up resistors (not included).

### Pinouts

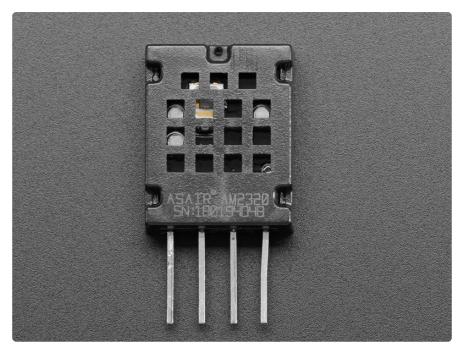


Starting from the left the pins are

- 1. **VDD** this is power in, can be 3-5VDC
- 2. SDA I2C data in/out, requires a pullup of 2-10K to  $\ensuremath{\text{VDD}}$
- 3. GND this is signal/power ground
- 4. SCL I2C clock in, requires a pullup of 2-10K to VDD

# Arduino Usage

You can easily wire this breakout to any microcontroller, we'll be using an Arduino. For another kind of microcontroller, just make sure it has I2C, then port the code - its pretty simple stuff!

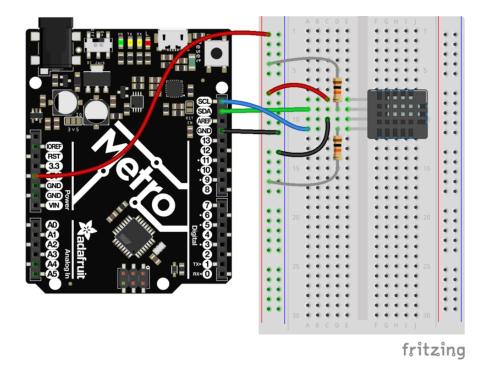

metrowire fritzing

https://adafru.it/AMu


- Connect Vin to the power supply, 3-5V is fine. Use the same voltage that the microcontroller logic is based off of. For most Arduinos, that is 5V
- Connect GND to common power/data ground
- Connect the SCL pin to the I2C clock SCL pin on your microcontroller
- Connect the SDA pin to the I2C data SDA pin on your microcontroller.

You will also need to add two I2C pullup resistors if your board does not already have them. You can use 2.2K - 10K but we will just use 10K. The resistors go from **VDD** to **SCL** and **SDA** each.

The AM2320 has a default I2C address of **0x5C** and cannot be changed.

### Install Adafruit Sensor

Open up the Library Manager in the Arduino IDE...

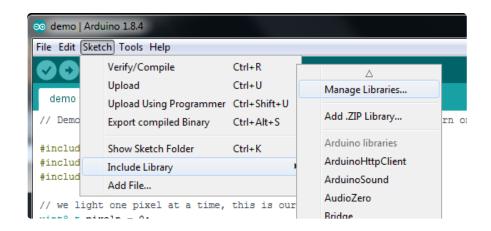

Search for Adafruit\_Sensor to locate the Unified Sensor library and Install it

pe All	C Topic	Library Mana	Adafruit_Sensor
afruit Unified Se	nsor by Adafruit Version		
			bstraction layer used by many Adafruit sensor libraries.
equired for all Ada			

#### Download Adafruit\_AM2320

To begin reading sensor data, you will need to also install the Adafruit\_AM2320 library (https://adafru.it/C3Y).

💿 Library Mar	nager		
Type All	V Topic All	✓ am2320	
		Adafruit Version 1.1.1 INSTAL np & Humidity Sensors Arduino	LLED o library for AM2320 I2C Temp & Humidity Sensors
Version 1.0.0	✓ Install		

We also have a great tutorial on Arduino library installation at: http://learn.adafruit.com/adafruit-all-about-arduino-libraries-install-use (https://adafru.it/aYM)

### Load Demo

Open up File->Examples->Adafruit\_AM2320->am2320\_basictest and upload to your microcontroller wired up to the sensor

File	Edit Sketch	Tools Help		
	New Open Open Recent Sketchbook	Ctrl+N Ctrl+O	SoftwareSerial	
	Examples Close Save Save As	Ctrl+W Ctrl+S Ctrl+Shift+S	Examples from Custom Libraries AccelStepper Adafruit ADS1X15	
	Page Setup Print	Ctrl+Shift+P Ctrl+P	Adafruit AM2315	basic_am2320
	Preferences Quit	Ctrl+Comma Ctrl+Q	Adafruit BLEFirmata	

Thats it! Now open up the serial terminal window at 9600 speed to begin the test.

			Send
Adafruit AM2320 Basic Test			
Cemp: 23.50			
lum: 32.70			
emp: 23.50			
um: 32.80			
emp: 23.50			
um: 33.00			
emp: 23.80			
am: 99.60			
emp: 24.00			
um: 99.80			
emp: 24.00			
um: 83.00			
emp: 23.80			
Autoscroll	Both NL & CR 🚽	9600 baud 👻	Clear output

You can try breathing on the sensor to increase the humidity.

### Python & CircuitPython


It's easy to use the AM2320 sensor with Python or CircuitPython and the Adafruit CircuitPython AM2320 (https://adafru.it/C3Z) module. This module allows you to easily write Python code that reads the humidity and temperature from the sensor.

You can use this sensor with any CircuitPython microcontroller board or with a computer that has GPIO and Python thanks to Adafruit\_Blinka, our CircuitPython-for-Python compatibility library (https://adafru.it/BSN).

One thing to watch out for with the AM2320 is that it goes into 'sleep' mode, you may find if you are scanning the i2c bus that the device does not appear - try scanning again and it will appear the second time!

# CircuitPython Microcontroller Wiring

First wire up a AM2320 to your board exactly as shown on the previous pages for Arduino using an I2C connection. Here's an example of wiring a ItsyBitsy M0 to the sensor with I2C:

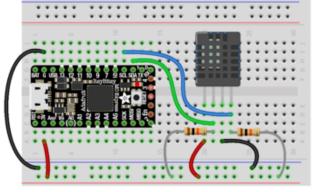

Board 3V to sensor VIN Board GND to sensor GND Board SCL to sensor SCL Board SDA to sensor SDA

fritzing


itsywire fritzing

https://adafru.it/AMx

# Python Computer Wiring

Since there's dozens of Linux computers/boards you can use we will show wiring for Raspberry Pi. For other platforms, please visit the guide for CircuitPython on Linux to see whether your platform is supported (https://adafru.it/BSN).

Here's the Raspberry Pi wired with I2C:

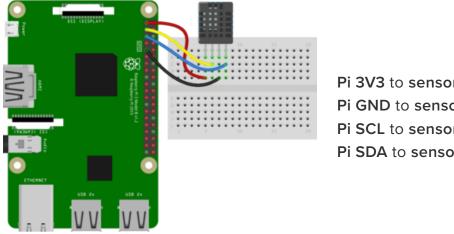

Pi 3V3 to sensor VIN Pi GND to sensor GND Pi SCL to sensor SCL Pi SDA to sensor SDA

The Raspberry Pi has built-in pull up resistors on SDA/SCL so we don't include them here. If you are using some other computer, check if you need to add your own 2-10K pullups to 3.3V!

### CircuitPython Installation of AM2320 Library

Next you'll need to install the Adafruit CircuitPython AM2320 (https://adafru.it/C3Z) library on your CircuitPython board.

First make sure you are running the <u>latest version of Adafruit CircuitPython</u> (https:// adafru.it/Amd) for your board.

Next you'll need to install the necessary libraries to use the hardware--carefully follow the steps to find and install these libraries from Adafruit's CircuitPython library bundle (https://adafru.it/zdx). Our introduction guide has a great page on how to install the library bundle (https://adafru.it/ABU) for both express and non-express boards.

For non-express boards like the Trinket MO or Gemma MO, you'll need to manually install the necessary libraries from the bundle:

- adafruit\_am2320.mpy
- adafruit\_bus\_device

You can also download the **adafruit\_am2320.mpy** from its releases page on Github (https://adafru.it/C3-).

Before continuing make sure your board's lib folder or root filesystem has the **adafruit\_am2320.mpy**, and **adafruit\_bus\_device** files and folders copied over.

Next connect to the board's serial REPL (https://adafru.it/Awz) so you are at the CircuitPython >>> prompt.

### Python Installation of AM2320 Library

You'll need to install the Adafruit\_Blinka library that provides the CircuitPython support in Python. This may also require enabling I2C on your platform and verifying you are running Python 3. Since each platform is a little different, and Linux changes

often, please visit the CircuitPython on Linux guide to get your computer ready (https://adafru.it/BSN)!

Once that's done, from your command line run the following command:

```
    sudo pip3 install adafruit-circuitpython-am2320
```

If your default Python is version 3 you may need to run 'pip' instead. Just make sure you aren't trying to use CircuitPython on Python 2.x, it isn't supported!

## CircuitPython & Python Usage

To demonstrate the usage of the sensor we'll initialize it and read the humidity and temperature from the board's Python REPL.

Run the following code to import the necessary modules and initialize the I2C connection with the sensor:

```
import board
import adafruit_am2320
i2c = board.I2C()
sensor = adafruit_am2320.AM2320(i2c)
```

Now you're ready to read values from the sensor using any of these properties:

- **relative\_humidity** The relative humidity measured by the sensor, this is a value from 0-100%.
- **temperature** The temperature measured by the sensor, a value in degrees Celsius.

For example, to print the temperature and relative humidity:

```
print('Humidity: {0}%'.format(sensor.relative_humidity))
print('Temperature: {0}C'.format(sensor.temperature))
```

>>> print('Humidity: {0}%'.format(sensor.relative\_humidity))
Humidity: 50.9%
>>> print('Temperature: {0}C'.format(sensor.temperature))
Temperature: 21.5C

If you want to take another reading, wait 2 seconds before requesting temperature or relative\_humidity again. Data in the sensor is only updated every 2 seconds!

That's all there is to using the AM2320 with CircuitPython!

Below is a complete example that measures the sensor readings and prints them every two seconds. Save this as **code.py** on your board and open the REPL to see the output.

### Full Example Code

```
# SPDX-FileCopyrightText: 2021 ladyada for Adafruit Industries
# SPDX-License-Identifier: MIT
import time
import board
import adafruit_am2320
# create the I2C shared bus
i2c = board.I2C() # uses board.SCL and board.SDA
# i2c = board.STEMMA_I2C() # For using the built-in STEMMA QT connector on a
microcontroller
am = adafruit_am2320.AM2320(i2c)
while True:
    print("Temperature: ", am.temperature)
    print("Humidity: ", am.relative_humidity)
    time.sleep(2)
```

### Python Docs

Python Docs (https://adafru.it/C40)