


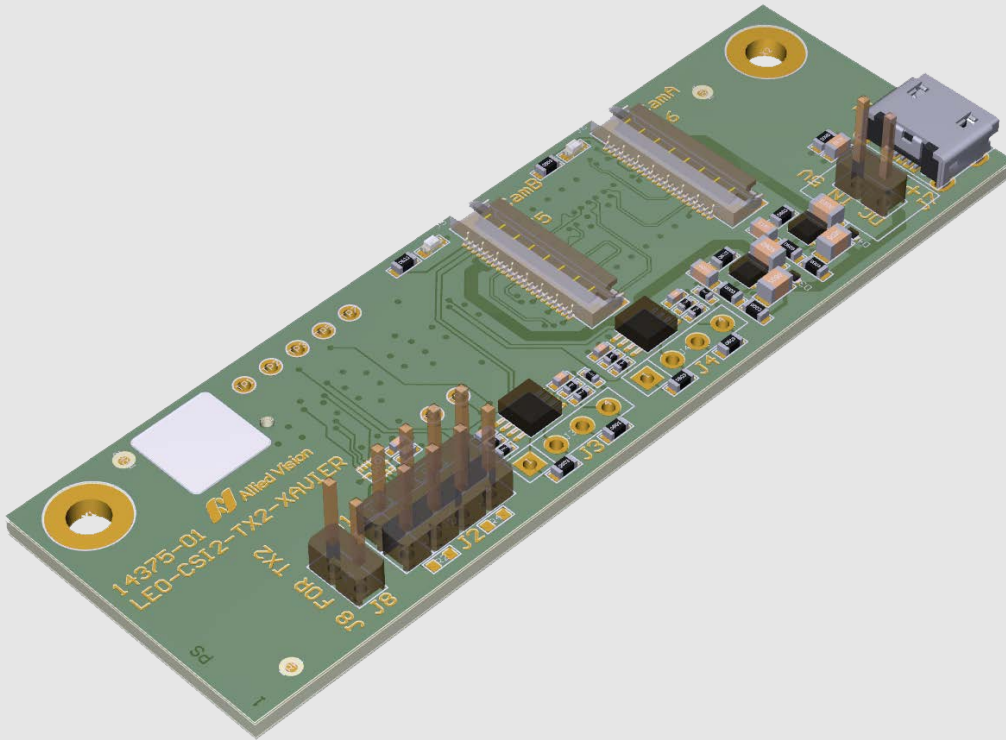

ALVIUM MIPI CSI-2 CAMERAS

Adapter Board for NVIDIA Jetson AGX Xavier and TX2 User Guide

V1.1.3

**Quick links**

- [This document at a glance](#) on page 15
- [Contact us](#) on page 17
- [Contents](#) on page 18

Read before use

EN - English

Safety

Before using the product, read these safety instructions. Observe the warnings at all times. Use the product only as stated in the [Intended use](#) on page 25.

**CAUTION****Risk of burns**

The product in operation can reach temperature levels which could cause burns.

**CAUTION****Risk of cuts by sharp edges**

The product can have sharp edges.

Intended use

Intended use of Allied Vision product is the integration into vision systems by professionals. All Allied Vision product is sold in a B2B setting.

DA - Dansk

Sikkerhed

Læs sikkerhedsanvisningerne, før produkt bruges. Overhold alle advarsler. Brug kun produkt som anført i [Intended use](#) på side 25.



FORSIGTIG

Forbrændingsfare

Når produkt bruges, kan det blive meget varmt og forårsage forbrændinger.



FORSIGTIG

Fare for skarpe kanter

Produktet kan have skarpe kanter.

Tilsigtet brug

Allied Vision produktets tilsigtede brug er en indbygning i et visionssystem, udført af fagfolk. Alle Allied Vision produkter sælges i B2B.

DE - Deutsch

Sicherheit

Bevor Sie das Produkt benutzen, lesen Sie diese Sicherheitshinweise. Beachten Sie diese Hinweise immer. Verwenden Sie das Produkt nur wie beschrieben in [Intended use](#) auf Seite 25.



VORSICHT

Gefahr von Verbrennungen

Im Betrieb kann das Produkt Temperaturen erreichen, die zu Verbrennungen führen.



VORSICHT

Schnitte durch scharfe Kanten

Das Produkt kann scharfe Kanten haben.

Bestimmungsgemäßer Gebrauch

Allied Vision Produkte sind bestimmt für die Integration in Bildverarbeitungssysteme durch Fachpersonal. Alle Allied Vision Produkte werden in einer B2B-Umgebung verkauft.

ES - Español

Seguridad

Antes de utilizar el producto lea estas instrucciones de seguridad. Observe las advertencias en todo momento. Utilice el producto solo tal y como se estipula en el [Intended use](#) en la página 25.



ATENCIÓN

Riesgo de quemaduras

El producto en funcionamiento puede alcanzar temperaturas que podrían provocar quemaduras.



ATENCIÓN

Riesgo de cortes por bordes afilados

El producto puede tener bordes afilados.

Uso previsto

El uso previsto del producto Allied Vision es la integración en el sistema de visión por parte de profesionales. Todos los productos Allied Vision se venden dentro de una relación B2B.

FI - Suomi

Turvallisuus

Lue nämä turvallisuusohjeet ennen tuotteen käyttöä. Noudata tuotetta joka hetki. Käytä tuotteen ainoastaan kohdassa [Intended use](#) sivulla 25 kuvatulla tavalla.



HUOMIO

Palovammojen vaara

Käytössä olevan tuotteen saavuttamat lämpötilatasot voivat aiheuttaa palovammoja.



HUOMIO

Terävien reunojen aiheuttama viiltovaara

Tuotteessa voi olla teräviä reunoja.

Käyttötarkoitus

Allied Vision-tuotteen käyttötarkoitus on integrointi kuvajärjestelmiin ammattilaisten toimesta. Kaikki Allied Vision-tuotteet myydään B2B-ympäristössä.

FR - Français

Sécurité

Veuillez lire ces consignes de sécurité avant d'utiliser le produit. Respectez continuellement les avertissements. Utilisez le produit uniquement comme indiqué sous [Intended use](#), page 25.



ATTENTION

Risque de brûlures

Le produit en service peut atteindre des niveaux de température susceptibles d'entraîner des brûlures.



ATTENTION

Risque de coupures sur des bords tranchants

Le produit peut présenter des bords tranchants.

Utilisation prévue

L'utilisation prévue du produit Allied Vision est son intégration dans des systèmes de vision par le soin de professionnels. Tout produit Allied Vision est vendu dans un cadre B2B.

עברית - HE

בטיחות

לפני השימוש במוצר, עליך לקרוא את הוראות הביטחון האלו. עליך לממש הוראות ביטחון אלו תמיד. השימוש במצלמה הוא רק לפי מה שכתוב ב"כוונת השימוש" (*Intended use* בעמוד 25).

זהירות

סכנת כווייה

בזמן הפעלת המוצר עלולות לעלות טמפרטורות גבוהות, שיכולות לגרום לכוויות.



זהירות

סכנת חתכים על ידי קצוות חדים

למוצר יכולים להיות קצוות חדים.



שימוש מיועד

מוצרי AlliedVision מיועדים לשילוב במערכות ממוחשבת לעיבוד צילומים ע"י אנשי מקצוע. כל מוצרי AlliedVision נמכרים לשימוש בסביבת B2B.

IT - Italiano

Sicurezza

Leggere queste istruzioni per la sicurezza prima di utilizzare il prodotto. Osservare sempre tutte le avvertenze. Utilizzare il prodotto come descritto alla sezione [Intended use](#) a pagina 25.



ATTENZIONE

Pericolo di ustioni

Durante il funzionamento, il prodotto può raggiungere temperature elevate che possono essere causa di ustioni.



ATTENZIONE

Pericolo di tagliarsi sui bordi affilati

I bordi del prodotto lente possono essere affilati.

Uso previsto

Il prodotto Allied Vision è concepito per essere integrato in sistemi di monitoraggio in campo professionale. Tutti i prodotti Allied Vision sono venduti in uno scenario B2B.

JA – 日本語

安全性

本製品を使用する前に、この安全ガイドをお読みください。警告を必ず守ってください。必ず21ページの[Intended use](#) 25 ページに従って使用してください。



注意

やけどの危険性

作動中のカメラは、やけどを引き起こす温度まで熱くなる恐れがあります。



注意

な端部で切り傷の危険性

本製品には鋭利な部分がある場合があります。

用途

Allied Vision製品は、専門家が視覚装置に統合することを意図したものです。すべてのAllied Vision製品は、企業間取り引き用に販売されています。

NL - Nederlands

Veiligheid

Lees deze veiligheidsinstructies voordat u het product gebruikt. Neem deze waarschuwingen altijd in acht. Gebruik het product uitsluitend, zoals aangegeven in het [Intended use](#) op pagina 25.



VOORZICHTIG

Risico van verbranding

Het gebruikte product, kan temperatuurwaarden bereiken die brandwonden kunnen veroorzaken.



VOORZICHTIG

Risico van snijwonden door scherpe randen

Het product kan scherpe randen hebben.

Beoogd gebruik

Het beoogde gebruik van het Allied Vision-product is de integratie in optische systemen door professionals. Alle Allied Vision-producten worden verkocht in de B2B-markt.

NO - Norsk

Sikkerhet

Les disse sikkerhetsinstruksene før du bruker produkt. Følg advarslene til en hver tid. Bruk kun produkt i samsvar med [Intended use](#) på side 25.



FORSIKTIG

Risiko for brannskader

Produktet i bruk kan nå temperaturnivåer som kan forårsake brannskader.



FORSIKTIG

Risiko for kutt fra skarpe kanter

Produktet kan ha skarpe kanter.

Tiltenkt bruk

Den tiltenkte bruken av Allied Vision-produktet er integrering i visjonssystemer av profesjonelle. Alle Allied Vision-produkter selges i en forretning til forretning-situasjon.

SV - Svenska

Säkerhet

Läs igenom säkerhetsinstruktionerna innan du använder produkten. Var hela tiden särskilt uppmärksam på varningarna. Använd enbart produkten på det sätt som anges i [Intended use](#) på sida 25.



VARNING

Risk för brännskada

Produkten i drift kan komma upp i temperaturer som kan orsaka brännskador.



VARNING

Risk för skärsår från vassa kanter

Produkten kan ha vassa kanter.

Avsedd användning

Den avsedda användningen av Allied Vision-produkter är integrering i visionssystem av fackmän. Samtliga Allied Vision-produkter säljs i en B2B-miljö.

ZH - 简体中文版

安全需知

在使用产品之前，请阅读这些安全说明。请务必遵守相关警告 和 [Intended use](#) 于第 25 页。



注意事项

烫伤风险

在产品运行过程中，温度可能会上升，导致烧伤的危险。



注意事项

锋利边缘割伤的风险

产品可能有锋利的边缘。

预期用途

Allied Vision 产品的预期用途是由专业人士整合到视觉系统中。所有 Allied Vision 的产品均通过 B2B 渠道销售。

This document at a glance



This chapter includes:

Shipping contents.....	16
What else do you need?	16

**Read this document carefully**

Learn to use adapter boards in the most safe and efficient way and avoid damage to your embedded system.

Shipping contents

The delivery consists of the adapter board for NVIDIA Jetson AGX Xavier and TX2 Developer Kits with no other components.

**Flexible printed circuit (FPC) cable is not included**

The FPC cable to connect the adapter board to the camera is not included.

What else do you need?

**Technical information and ordering of Allied Vision products**

- For all information about Alvium CSI-2 cameras and accessories, see www.alliedvision.com/en/support/technical-documentation/alvium-csi-2-documentation.
- Please contact your Allied Vision Sales representative for ordering and for additional information on hardware options for Alvium cameras.

**Technical information on NVIDIA Jetson embedded boards**

For information on NVIDIA Jetson embedded boards, see www.nvidia.com/en-us/autonomous-machines/embedded-systems

Contact us

Website, email

General

www.alliedvision.com/en/contact

info@alliedvision.com

Distribution partners

www.alliedvision.com/en/avt-locations/avt-distributors

Support

www.alliedvision.com/en/support

www.alliedvision.com/en/about-us/contact-us/technical-support-repair/-/rma

Offices

Europe, Middle East, and Africa (Headquarters)

Allied Vision Technologies GmbH
Taschenweg 2a
07646 Stadtroda, Germany
T// +49 36428 677-0 (Reception)
T// +49 36428 677-230 (Sales)
F// +49 36428 677-28

North, Central, and South America, Canada

Allied Vision Technologies Canada Inc.
300 – 4621 Canada Way
Burnaby, BC V5G 4X8, Canada
T// +1 604 875 8855

USA

Allied Vision Technologies, Inc.
102 Pickering Way- Suite 502
Exton, PA 19341, USA
Toll-free// +1-877-USA-1394
T// +1 978 225 2030

Asia-Pacific

China

Allied Vision Technologies Shanghai Co Ltd.
B-510, Venture International Business Park
2679 Hechuan Road
Minhang District, Shanghai 201103
People's Republic of China
T// +86 21 64861133

Japan

Allied Vision Technologies
Yokohama Portside Bldg. 10F
8-1 Sakae-cho, Kanagawa-ku
Yokohama-shi, Kanagawa, 221-0052
T// +81 (0) 45 577 9527

Singapore

Allied Vision Technologies Asia Pte. Ltd
82 Playfair Rd, #07-01 D'Lithium
Singapore 368001
T// +65 6634 9027

Contents

Read before use	2
This document at a glance	15
Shipping contents	16
What else do you need?	16
Contact us	17
Document history and conventions	20
Document history	21
Conventions used in this user guide	22
Typographical styles	22
Symbols and notes	22
Component naming	23
Compliance, safety, and intended use	24
Compliance notifications	25
Intended use	25
Copyright and trademarks	25
Your safety	26
Handling hot adapter boards	26
Sharp edges	26
Product safety	26
Embedded systems	26
Electrical connections	26
Electrostatic discharge (ESD)	27
Camera power	27
FPC connectors	27
MIPI CSI-2 FPC cables	28
Specifications	30
General specifications	31
PCB and PCBA number	31
Dimensions and PCB layout	32
Electronic schematics	33
Camera power	35
I/O connections	35
Using the adapter board	36
Embedded system accessories	37
Connecting FPC cables to Hirose FPC connectors	37

Installing adapter boards	39
Connecting the embedded board	39
Connecting the camera	40
Connecting USB power	40
Connecting the I/Os	41

Document history and conventions



This chapter includes:

Document history	21
Conventions used in this user guide.....	22
Component naming	23

Document history

Version	Date	Remarks
V1.1.3	2024-Jul-15	Updated addresses in Contact us on page 17.
V1.1.2	2024-Mar-15	Added UKCA symbol in Compliance notifications on page 25.
V1.1.1	2023-Aug-24	- Updated notes for requirements with USB power supplies. - Applied editorial changes.
V1.1.0	2023-Jun-06	- Updated product images. - Added Read before use on page 2. - Added 18947 MIPI CSI-2 cable to General specifications on page 31. - Removed safety note for desoldering resistors in Product safety on page 26 and instructions from Connecting the I/Os on page 41. - Corrected connector IDs in the introduction text for Table 5 on page 43. - Applied editorial changes.
V1.0.3	2021-Dec-01	- Added notes about housings to avoid injuries by heat. - Added contents about PCB and PCBA number on page 31. - Applied editorial changes.
V1.0.2	2020-Sep-02	Added information on I/O specifications in I/O connections on page 35 and on connecting I/Os in Connecting the I/Os on page 41.
V1.0.1	2020-Jun-02	- Added the diameter for the mounting holes of the adapter board. - Applied editorial changes.
V1.0.0	2019-Nov-21	Release version

Table 1: Document history

Conventions used in this user guide

To give this user guide an easily understood layout and to emphasize important information, the following typographical styles and symbols are used:

Typographical styles

Style	Function
Emphasis	Highlighting important things
Web links and references	Links to webpages and internal cross references

Table 2: Typographical styles

Symbols and notes



CAUTION

Risk of burns

Precautions are described.



CAUTION

Risk of cuts by sharp edges

Precautions are described.



NOTICE

Material damage

Precautions are described.



Practical tip

Additional information helps to understand or ease handling the camera and components.



Additional information

Web link or reference to an external source with more information is shown.

Component naming

Components described in this user guide are not defined by common standards. Therefore, naming must be accurate to avoid misconceptions. Because naming is lengthy, reading is difficult. Simplified terms are used in this document.

Long version	Short version used in this document
Adapter Board for NVIDIA Jetson AGX Xavier Developer Kit and for NVIDIA Jetson TX2 Developer Kit	Adapter for Jetson AGX Xavier and TX2
MIPI CSI-2 ¹ adapter board	Adapter board
MIPI CSI-2 FPC (flexible printed circuit) cable	FPC cable
¹ MIPI CSI-2 Mobile Industry Processor Interface Camera Serial Interface 2	

Table 3: MIPI CSI-2 adapter board naming

Compliance, safety, and intended use



This chapter includes:

Compliance notifications	25
Intended use	25
Copyright and trademarks	25
Your safety	26
Product safety	26

Compliance notifications



National regulations on disposal must be followed.

Intended use

Allied Vision's objective is the development, design, production, maintenance, servicing and distribution of digital cameras and components for image processing. We are offering standard products as well as customized solutions.

Intended use of Allied Vision product is the integration into Vision systems by professionals. All Allied Vision product is sold in a B2B setting.

Allied Vision isn't a legal manufacturer of medical product. Instead, Allied Vision cameras and accessories may be used as components for medical product after design-in by the medical device manufacturer and based on a quality assurance agreement (QAA) between Allied Vision (supplier) and medical device manufacturer (customer). Allied Vision's duties in that respect are defined by ISO 13485, clause 7.2 (customer-related processes, equivalent to ISO 9001, clause 8.2).

Copyright and trademarks

All text, pictures, and graphics are protected by copyright and other laws protecting intellectual property. All content is subject to change without notice.

All trademarks, logos, and brands cited in this document are property and/or copyright material of their respective owners. Use of these trademarks, logos, and brands does not imply endorsement.

Copyright © 2024 Allied Vision Technologies GmbH. All rights reserved.

Your safety

This section informs about issues related to your personal safety. Descriptions explain how to avoid hazards and use adapter boards safely.

Handling hot adapter boards

Electrical components of adapter boards get hot during operation.

Before operation, include adapter boards in housings that disable any contact to hot components.

Sharp edges

The edges of PCBs (printed circuit boards) and the assembled components can be sharp. Be careful these edges do not cut your skin when handling adapter boards.

Product safety

To prevent material damage, read the following to understand risks in using adapter boards.

Embedded systems

Setup and operation of Alvium CSI-2 cameras in embedded systems is different than for cameras in PC-based systems. Components can easily be damaged. If you are unfamiliar with embedded systems, be extremely careful. Follow the instructions in the Alvium CSI-2 Cameras User Guide.

Electrical connections

The MIPI CSI-2 standard does not specify electrical connections as extensively as the USB or GigE standard. Read specifications carefully.

Alvium CSI-2 cameras are not protected against damage caused by reverse polarity.

Electrostatic discharge (ESD)

Electrostatic discharge (ESD) is dangerous for electronic devices, especially when tools or hands get in contact with connectors. We recommend measures to avoid damage by ESD:

- Unpacking: Remove the adapter board from its anti-static packaging only when your body is grounded.
- Workplace: Use a static-safe workplace with static-dissipative mat and air ionization.
- Wrist strap: Wear a static-dissipative wrist strap to ground your body.
- Clothing: Wear ESD-protective clothing. Keep components away from your body and clothing. Even if you are wearing a wrist strap, your body is grounded but your clothes are not.
- Housing: use an ESD protective housing, including the camera, embedded board, adapter board, and FPC cable.

Camera power

Operating cameras beyond the specified range damages cameras. Cameras are powered using the FPC connector at a maximum input of 5.5 VDC, using a limited power source (LPS), according to IEC62368-1: 2014 (Second Edition) with minimum 1.5 A per camera. Cameras are not intended to be connected to DC distribution networks.

We recommend you to power cameras with USB 2.0 Micro B power supplies providing 4.5 to 5.5 VDC at 1.5 A for 1 camera and 3.0 A for 2 cameras. Depending on the camera model and the intensity of use of the camera by your application, the power consumption may be lower.

If you want to power the camera via the embedded board, note:

Only Jetson TX2 boards enable to power cameras, Jetson Xavier boards do not.

FPC connectors

Hirose FH55-22S-0.5SH FPC connectors enable compact camera design. The small-sized connectors are sensitive to mechanical stress and are specified for maximum 20 mating and unmating cycles. Especially if you are inexperienced with this connector, be very cautious. If the FPC connector is broken, the complete device must be replaced. Follow the instructions in [Using the adapter board](#) on page 36 carefully.

- Avoid stress to FPC connectors.
- Allow only the FPC cable to touch conductors.

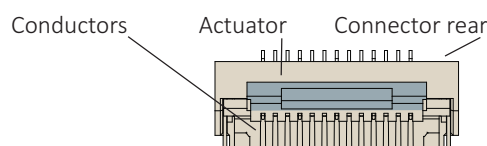


Figure 1: Hirose FH55-22S-0.5SH FPC connector

**Additional information**

For technical data and more instructions on the Hirose FH55-22S-0.5SH connector, see the manufacturer data sheet at www.hirose.com.

Handling the actuator

- Move the actuator only between 0° (locked position) to 105° (open position).
- Carefully flip the actuator at the middle with your finger nail, see [Connecting FPC cables to Hirose FPC connectors](#) on page 37.

MIPI CSI-2 FPC cables

**Manufacturing FPC cables or embedded boards**

If you want to design your own components to connect Alvium CSI-2 cameras to embedded boards, contact your Allied Vision Sales representative or visit www.alliedvision.com/en/about-us/contact-us/technical-support-repair/-rma.

FPC cable position

Short circuits of the FPC cable can damage the camera or connected hardware.

- Insert the FPC cable into the connector with cable guiding tabs matching the connector's side guides. See [Connecting FPC cables to Hirose FPC connectors](#) on page 37.
- Connect the camera and the embedded board (adapter) only as shown by the arrow printed on the FPC cable, see [Connecting FPC cables to Hirose FPC connectors](#) on page 37.

FPC cables and stress

Over-stressed FPC cables can damage the camera and connected hardware. When camera and embedded board are twisted against each other or pulled apart from each other with too much force, the FPC cable is over-stressed. Spring contacts of FPC connectors are worn out, causing short circuits and unreliable electrical connections.

- Insert the FPC cable into the FPC connector at 12° to the PCB board surface. See [Connecting FPC cables to Hirose FPC connectors](#) on page 37.
- Allow only slight bending of the FPC cable (minimum bending radius: 10 mm).
- For strain relief, we recommend you to mount the embedded board, adapter board, and camera to a common base.

No hot-plugging for MIPI CSI-2

Alvium CSI-2 cameras do not support hot-plugging. Hot-plugging can destroy the camera and connected hardware by high inrush current.

- Disconnect power supplies before connecting FPC cables.

FPC cable signal quality

Noise and electromagnetic interference can disable camera functions.

- Avoid contact to metal surfaces, causing electromagnetic interference.
- Please use cables recommended by Allied Vision.

Specifications



This chapter includes:

General specifications	31
Dimensions and PCB layout	32
Electronic schematics	33
Camera power	35
I/O connections.....	35

General specifications

Feature	Specification
Product code	14909
PCB number	14375 (see PCB and PCBA number below)
PCBA number	14376 (see PCB and PCBA number below)
Dimensions (Length × width × height [mm])	75.6 × 25 × 15.3
Mass (adapter board only)	10 g
Storage temperature	-10 °C to +70 °C
Operating temperature	+5 °C to +65 °C
Relative humidity	0% to 80% (non-condensing)
Supported embedded boards	- NVIDIA Jetson AGX Xavier Developer Kit - NVIDIA Jetson TX2 Developer Kit
Supported cameras	Alvium CSI-2 cameras
Supported FPC cables for camera connections	Allied Vision 12316, 12317, 12318, 18947

Table 4: Adapter for Jetson AGX Xavier and TX2 specifications

PCB and PCBA number

The PCB number is printed to the FPC connector side, the PCBA number is placed anywhere on the circuit board, for example, like this:

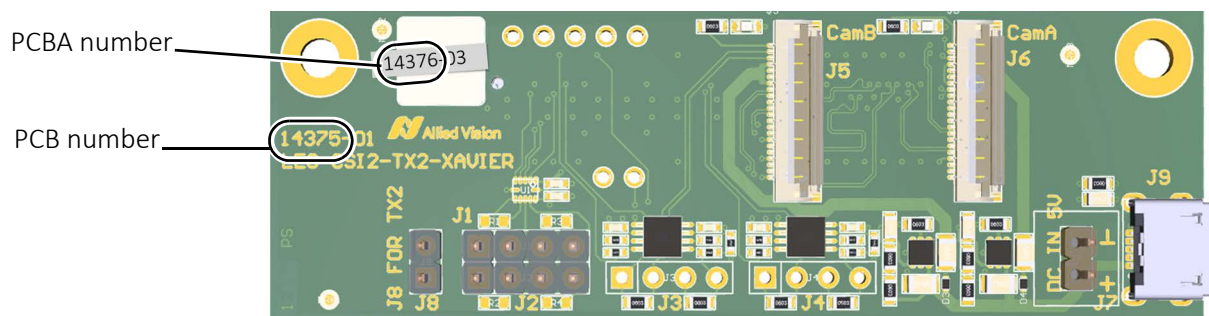


Figure 2: PCB and PCBA number on the adapter board

Dimensions and PCB layout

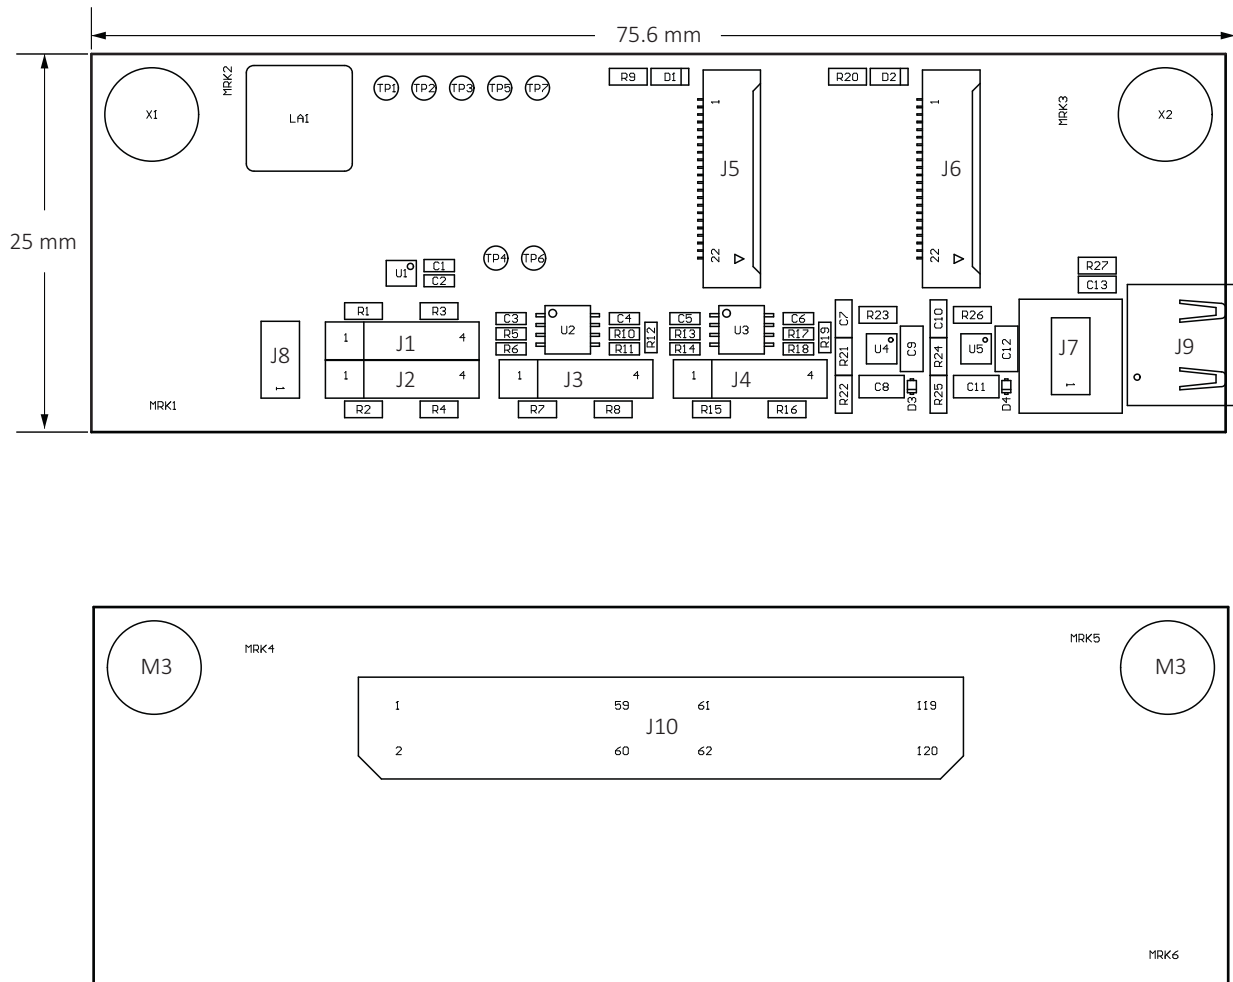


Figure 3: Adapter for Jetson AGX Xavier and TX2 dimensions and PCB layout

To Jetson TX2 and Xavier

J10

CS10_D0_P 1
CS10_D0_N 3
CS10_CLK_P 5
CS10_CLK_N 7
CS10_D1_P 9
CS10_D1_N 11
CS12_D0_P 13
CS12_D0_N 15
CS12_CLK_P 17
CS12_CLK_N 19
CS12_D1_P 21
CS12_D1_N 23
CS14_D0_P 25
CS14_D0_N 27
CS14_CLK_P 29
CS14_CLK_N 31
CS14_D1_P 33
CS14_D1_N 35
CS15_D0_P 37
CS15_D0_N 39
CS15_CLK_P 41
CS15_CLK_N 43
CS15_D1_P 45
CS15_D1_N 47
CS15_D0_P 49
CS15_D0_N 51
CS15_CLK_P 53
CS15_CLK_N 55
CS15_D1_P 57
CS15_D1_N 59
CS17_D0_P 61
CS17_D0_N 63
CS17_CLK_P 65
CS17_CLK_N 67
CS17_D1_P 69
CS17_D1_N 71
I2C_CAM_CLK_1V8 73
I2C_CAM_DA_T_1V8 75
I2C_CAM_DA_T_1V8 77
I2C_CAM_DA_T_1V8 79
I2C_CAM_DA_T_1V8 81
I2C_CAM_DA_T_1V8 83
I2C_CAM_DA_T_1V8 85
I2C_CAM_DA_T_1V8 87
I2C_CAM_DA_T_1V8 89
I2C_CAM_DA_T_1V8 91
I2C_CAM_DA_T_1V8 93
I2C_CAM_DA_T_1V8 95
I2C_CAM_DA_T_1V8 97
I2C_CAM_DA_T_1V8 99
I2C_CAM_DA_T_1V8 101
I2C_CAM_DA_T_1V8 103
I2C_CAM_DA_T_1V8 105
I2C_CAM_DA_T_1V8 107
I2C_CAM_DA_T_1V8 109
I2C_CAM_DA_T_1V8 111
I2C_CAM_DA_T_1V8 113
I2C_CAM_DA_T_1V8 115
I2C_CAM_DA_T_1V8 117
I2C_CAM_DA_T_1V8 119
I2C_CAM_DA_T_1V8 121
I2C_CAM_DA_T_1V8 123
I2C_CAM_DA_T_1V8 125
I2C_CAM_DA_T_1V8 127
I2C_CAM_DA_T_1V8 129
I2C_CAM_DA_T_1V8 131
I2C_CAM_DA_T_1V8 133
I2C_CAM_DA_T_1V8 135
I2C_CAM_DA_T_1V8 137
I2C_CAM_DA_T_1V8 139
I2C_CAM_DA_T_1V8 141
I2C_CAM_DA_T_1V8 143
I2C_CAM_DA_T_1V8 145
I2C_CAM_DA_T_1V8 147
I2C_CAM_DA_T_1V8 149
I2C_CAM_DA_T_1V8 151
I2C_CAM_DA_T_1V8 153
I2C_CAM_DA_T_1V8 155
I2C_CAM_DA_T_1V8 157
I2C_CAM_DA_T_1V8 159
I2C_CAM_DA_T_1V8 161
I2C_CAM_DA_T_1V8 163
I2C_CAM_DA_T_1V8 165
I2C_CAM_DA_T_1V8 167
I2C_CAM_DA_T_1V8 169
I2C_CAM_DA_T_1V8 171
I2C_CAM_DA_T_1V8 173
I2C_CAM_DA_T_1V8 175
I2C_CAM_DA_T_1V8 177
I2C_CAM_DA_T_1V8 179
I2C_CAM_DA_T_1V8 181
I2C_CAM_DA_T_1V8 183
I2C_CAM_DA_T_1V8 185
I2C_CAM_DA_T_1V8 187
I2C_CAM_DA_T_1V8 189
I2C_CAM_DA_T_1V8 191
I2C_CAM_DA_T_1V8 193
I2C_CAM_DA_T_1V8 195
I2C_CAM_DA_T_1V8 197
I2C_CAM_DA_T_1V8 199
I2C_CAM_DA_T_1V8 201
I2C_CAM_DA_T_1V8 203
I2C_CAM_DA_T_1V8 205
I2C_CAM_DA_T_1V8 207
I2C_CAM_DA_T_1V8 209
I2C_CAM_DA_T_1V8 211
I2C_CAM_DA_T_1V8 213
I2C_CAM_DA_T_1V8 215
I2C_CAM_DA_T_1V8 217
I2C_CAM_DA_T_1V8 219
I2C_CAM_DA_T_1V8 221
I2C_CAM_DA_T_1V8 223
I2C_CAM_DA_T_1V8 225
I2C_CAM_DA_T_1V8 227
I2C_CAM_DA_T_1V8 229
I2C_CAM_DA_T_1V8 231
I2C_CAM_DA_T_1V8 233
I2C_CAM_DA_T_1V8 235
I2C_CAM_DA_T_1V8 237
I2C_CAM_DA_T_1V8 239
I2C_CAM_DA_T_1V8 241
I2C_CAM_DA_T_1V8 243
I2C_CAM_DA_T_1V8 245
I2C_CAM_DA_T_1V8 247
I2C_CAM_DA_T_1V8 249
I2C_CAM_DA_T_1V8 251
I2C_CAM_DA_T_1V8 253
I2C_CAM_DA_T_1V8 255
I2C_CAM_DA_T_1V8 257
I2C_CAM_DA_T_1V8 259
I2C_CAM_DA_T_1V8 261
I2C_CAM_DA_T_1V8 263
I2C_CAM_DA_T_1V8 265
I2C_CAM_DA_T_1V8 267
I2C_CAM_DA_T_1V8 269
I2C_CAM_DA_T_1V8 271
I2C_CAM_DA_T_1V8 273
I2C_CAM_DA_T_1V8 275
I2C_CAM_DA_T_1V8 277
I2C_CAM_DA_T_1V8 279
I2C_CAM_DA_T_1V8 281
I2C_CAM_DA_T_1V8 283
I2C_CAM_DA_T_1V8 285
I2C_CAM_DA_T_1V8 287
I2C_CAM_DA_T_1V8 289
I2C_CAM_DA_T_1V8 291
I2C_CAM_DA_T_1V8 293
I2C_CAM_DA_T_1V8 295
I2C_CAM_DA_T_1V8 297
I2C_CAM_DA_T_1V8 299
I2C_CAM_DA_T_1V8 301
I2C_CAM_DA_T_1V8 303
I2C_CAM_DA_T_1V8 305
I2C_CAM_DA_T_1V8 307
I2C_CAM_DA_T_1V8 309
I2C_CAM_DA_T_1V8 311
I2C_CAM_DA_T_1V8 313
I2C_CAM_DA_T_1V8 315
I2C_CAM_DA_T_1V8 317
I2C_CAM_DA_T_1V8 319
I2C_CAM_DA_T_1V8 321
I2C_CAM_DA_T_1V8 323
I2C_CAM_DA_T_1V8 325
I2C_CAM_DA_T_1V8 327
I2C_CAM_DA_T_1V8 329
I2C_CAM_DA_T_1V8 331
I2C_CAM_DA_T_1V8 333
I2C_CAM_DA_T_1V8 335
I2C_CAM_DA_T_1V8 337
I2C_CAM_DA_T_1V8 339
I2C_CAM_DA_T_1V8 341
I2C_CAM_DA_T_1V8 343
I2C_CAM_DA_T_1V8 345
I2C_CAM_DA_T_1V8 347
I2C_CAM_DA_T_1V8 349
I2C_CAM_DA_T_1V8 351
I2C_CAM_DA_T_1V8 353
I2C_CAM_DA_T_1V8 355
I2C_CAM_DA_T_1V8 357
I2C_CAM_DA_T_1V8 359
I2C_CAM_DA_T_1V8 361
I2C_CAM_DA_T_1V8 363
I2C_CAM_DA_T_1V8 365
I2C_CAM_DA_T_1V8 367
I2C_CAM_DA_T_1V8 369
I2C_CAM_DA_T_1V8 371
I2C_CAM_DA_T_1V8 373
I2C_CAM_DA_T_1V8 375
I2C_CAM_DA_T_1V8 377
I2C_CAM_DA_T_1V8 379
I2C_CAM_DA_T_1V8 381
I2C_CAM_DA_T_1V8 383
I2C_CAM_DA_T_1V8 385
I2C_CAM_DA_T_1V8 387
I2C_CAM_DA_T_1V8 389
I2C_CAM_DA_T_1V8 391
I2C_CAM_DA_T_1V8 393
I2C_CAM_DA_T_1V8 395
I2C_CAM_DA_T_1V8 397
I2C_CAM_DA_T_1V8 399
I2C_CAM_DA_T_1V8 401
I2C_CAM_DA_T_1V8 403
I2C_CAM_DA_T_1V8 405
I2C_CAM_DA_T_1V8 407
I2C_CAM_DA_T_1V8 409
I2C_CAM_DA_T_1V8 411
I2C_CAM_DA_T_1V8 413
I2C_CAM_DA_T_1V8 415
I2C_CAM_DA_T_1V8 417
I2C_CAM_DA_T_1V8 419
I2C_CAM_DA_T_1V8 421
I2C_CAM_DA_T_1V8 423
I2C_CAM_DA_T_1V8 425
I2C_CAM_DA_T_1V8 427
I2C_CAM_DA_T_1V8 429
I2C_CAM_DA_T_1V8 431
I2C_CAM_DA_T_1V8 433
I2C_CAM_DA_T_1V8 435
I2C_CAM_DA_T_1V8 437
I2C_CAM_DA_T_1V8 439
I2C_CAM_DA_T_1V8 441
I2C_CAM_DA_T_1V8 443
I2C_CAM_DA_T_1V8 445
I2C_CAM_DA_T_1V8 447
I2C_CAM_DA_T_1V8 449
I2C_CAM_DA_T_1V8 451
I2C_CAM_DA_T_1V8 453
I2C_CAM_DA_T_1V8 455
I2C_CAM_DA_T_1V8 457
I2C_CAM_DA_T_1V8 459
I2C_CAM_DA_T_1V8 461
I2C_CAM_DA_T_1V8 463
I2C_CAM_DA_T_1V8 465
I2C_CAM_DA_T_1V8 467
I2C_CAM_DA_T_1V8 469
I2C_CAM_DA_T_1V8 471
I2C_CAM_DA_T_1V8 473
I2C_CAM_DA_T_1V8 475
I2C_CAM_DA_T_1V8 477
I2C_CAM_DA_T_1V8 479
I2C_CAM_DA_T_1V8 481
I2C_CAM_DA_T_1V8 483
I2C_CAM_DA_T_1V8 485
I2C_CAM_DA_T_1V8 487
I2C_CAM_DA_T_1V8 489
I2C_CAM_DA_T_1V8 491
I2C_CAM_DA_T_1V8 493
I2C_CAM_DA_T_1V8 495
I2C_CAM_DA_T_1V8 497
I2C_CAM_DA_T_1V8 499
I2C_CAM_DA_T_1V8 501
I2C_CAM_DA_T_1V8 503
I2C_CAM_DA_T_1V8 505
I2C_CAM_DA_T_1V8 507
I2C_CAM_DA_T_1V8 509
I2C_CAM_DA_T_1V8 511
I2C_CAM_DA_T_1V8 513
I2C_CAM_DA_T_1V8 515
I2C_CAM_DA_T_1V8 517
I2C_CAM_DA_T_1V8 519
I2C_CAM_DA_T_1V8 521
I2C_CAM_DA_T_1V8 523
I2C_CAM_DA_T_1V8 525
I2C_CAM_DA_T_1V8 527
I2C_CAM_DA_T_1V8 529
I2C_CAM_DA_T_1V8

Note: R1 to R4 are not equipped.


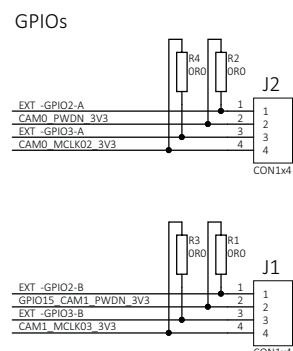


Figure 4: Adapter for Jetson AGX Xavier and TX2 electronic schematics, part 1

VCC-EXT-IN: DCIN 4V5..5V5, max. 2 × 1.5 A



Note:
J7 is not equipped.

 External power



Note:
Recommended to be used

External USB power

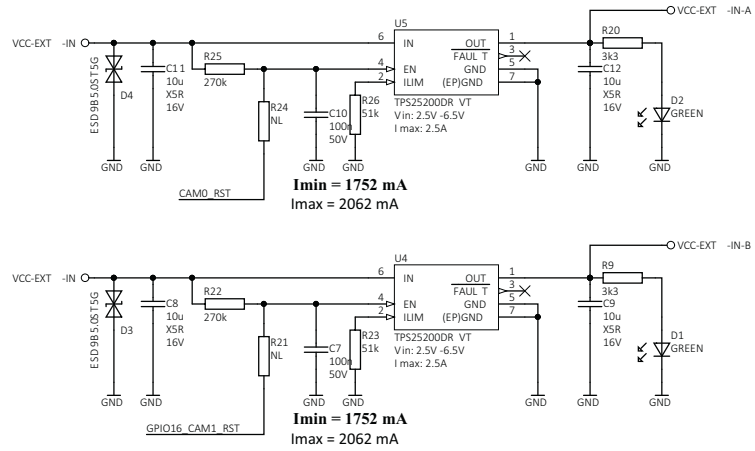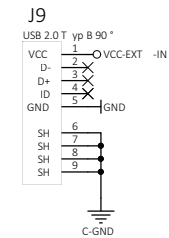


NOTICE

Damage to the embedded board


- We recommend you to power Alvium cameras using the USB connector J9.
- If you want to use J8 to power Alvium cameras via Jetson TX2, ensure the embedded board's power supply provides sufficient current for the Jetson TX2 board **and** the connected camera(s).
- **Do not use J8 for camera power with other embedded boards.**

Place a jumper on J8 to power Alvium cameras via Jetson TX2 boards.

 
TX2 power




GPIO Levelshifter 1V8 <-> 3V3

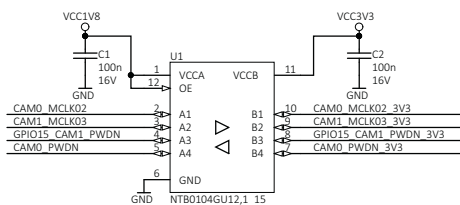




I2C Levelshifter CAM

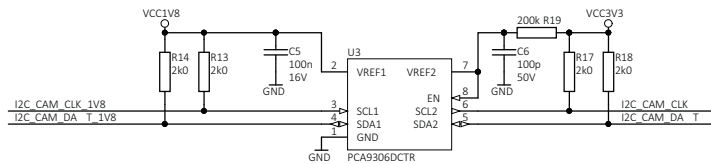


I2C Levelshifter GP0

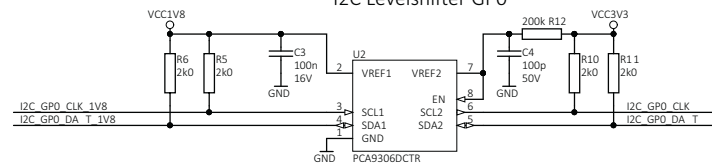

GND <-> Chassis-GND

 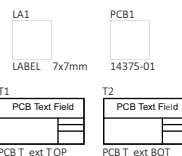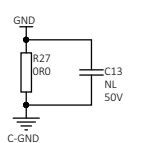

Unused GPIO 1V8

 

Holes on NVIDIA carrier boards are connected to GND.

Figure 5: Adapter for Jetson AGX Xavier and TX2 electronic schematics, part 2

Camera power



NOTICE

Damage to power supplies

If power supplies do not provide sufficient current, they may be damaged.

Ensure USB power supplies provide 1.5 A for 1 camera and 3.0 A for 2 cameras. Depending on the camera model and the intensity of use of the camera by your application, the power consumption may be lower.

Power Alvium cameras using the USB 2.0 Micro B receptacle (J9). See the description in [Figure 5, Adapter for Jetson AGX Xavier and TX2 electronic schematics, part 2](#) on page 34.

I/O connections

You can use the I/O lines to trigger the camera or to output a signal from the camera to trigger a device, such as a strobe light to control illumination. Camera I/Os can be connected to the embedded board I/Os through the adapter board's pin headers. See [Table 5](#) on page 43 for details.

If you want to reduce signal latencies, such as for triggering the camera by a light barrier, you can connect I/O cables directly to the adapter board. Please see the instructions in [Connecting the I/Os](#) on page 41.

Using the adapter board



This chapter includes:

Embedded system accessories	37
Connecting FPC cables to Hirose FPC connectors	37
Installing adapter boards	39

Embedded system accessories



FPC cables

For more information, see the Alvium Cameras Accessory Guide at www.alliedvision.com/en/support/technical-documentation/alvium-csi-2-documentation.



Designing your own embedded components

If you want to design your own components to connect Alvium CSI-2 cameras to embedded boards, contact your Allied Vision Sales representative or visit www.alliedvision.com/en/about-us/contact-us/technical-support-repair/-rma.

Proper usage of the Hirose FH55-22S-0.5SH FPC connector is vital for connecting Alvium CSI-2 cameras to embedded boards. Therefore, instructions start with usage of the FPC connector. Afterwards, setting up the adapter boards is described.

Connecting FPC cables to Hirose FPC connectors

Figure 6 shows how the FPC cable connects to the FPC connector.

Follow the instructions to connect the FPC cable to the camera and to the embedded board.

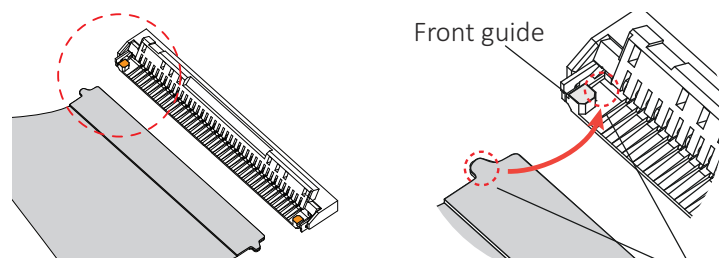


Figure 6: FPC cable and FPC connector (open position)

1. Opening the FPC connector:
With your fingernail*, flip the actuator to open position at 105° to the PCB surface, see Figure 7.

*Or use a plastic tool, as metal tools can damage the actuator.

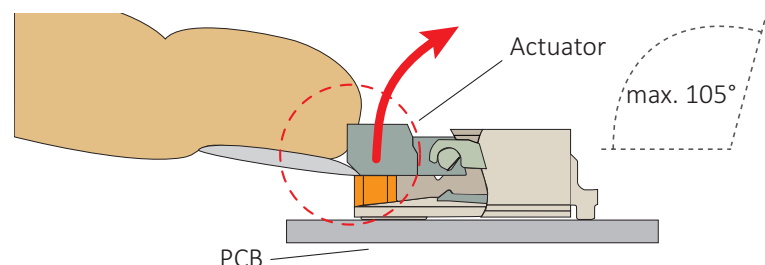


Figure 7: Opening the FPC connector



NOTICE

Damage to the camera by reverse polarity

If Alvium CSI-2 cameras are powered with reverse polarity, camera electronics is damaged.

- Before connecting camera power and I/O power, carefully read the Alvium Cameras User Guide for the FPC connector pin assignment.
- Connect the cable as shown in this section.

Adapter board



Camera

Figure 8: FPC cable image data direction

2. **Ensuring proper cable direction between host and camera**, take the FPC cable with conductors facing the FPC connector conductors (see Figure 9).

3. Inserting the FPC cable:
At a horizontal angle of 90° to the connector's rear (see Figure 9) and at a vertical angle of 12° to the PCB (see Figure 10), slowly insert the FPC cable into the actuator...

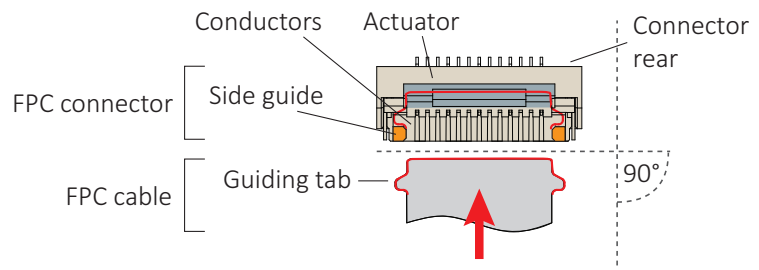


Figure 9: FPC cable and FPC connector

4. ...until cable guiding tabs are caught between connector rear and side guides (see Figure 9). Pull the cable slightly to ensure guiding tabs are properly engaged.
5. Holding the FPC cable in position, flap down the actuator to closed position (see Figure 10).

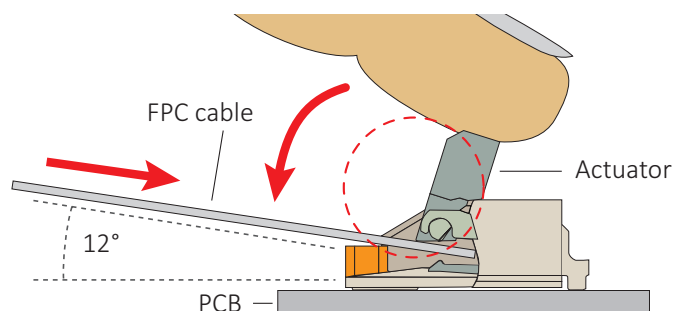


Figure 10: Engaging the FPC cable in the FPC connector

Installing adapter boards



CAUTION

Burns to the skin

Electrical components get hot during operation.

- Before operation, include adapter boards in housings that disable any contact to hot components.



NOTICE

Damage to electronics

- Disconnect all power supplies before installing the adapter board to your embedded board.
- Reconnect power only after installation is complete.
- Mount the embedded board, adapter board, and camera on a common base for strain relief.



NVIDIA Jetson Manuals

For details on NVIDIA Jetson Nano boards, including FFC connectors, see the manufacturer's manual at

www.nvidia.com/en-us/autonomous-machines/embedded-systems.

Connecting the embedded board

1. Connect the embedded board connector (a) of the adapter board to the camera connector of the embedded board.

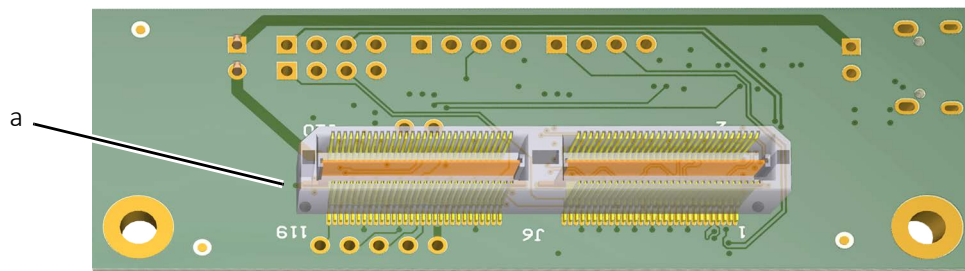


Figure 11: Embedded board connector of the adapter board (bottom view)

Connecting the camera



FPC camera connector priority

The FPC camera connectors J5 and J6 have the same priority.

1. Following the instructions in [Connecting FPC cables to Hirose FPC connectors](#) on page 37, connect the FPC cable to one of the FPC camera connectors (b).
2. Connect the other end of the FPC cable to the camera.

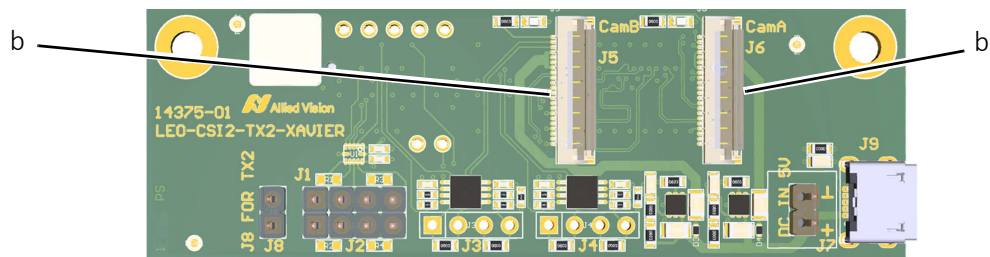


Figure 12: FPC camera connectors of the adapter board (top view)

Your Alvium CSI-2 camera is connected to the embedded board.

Connecting USB power

We recommend you to power the camera(s) using USB power.



NOTICE

Damage to power supplies

If power supplies do not provide sufficient current, they may be damaged.

Ensure USB power supplies provide 1.5 A for 1 camera and 3.0 A for 2 cameras. Depending on the camera model and the intensity of use of the camera by your application, the power consumption may be lower.

1. Ensure the USB power supply is disconnected from the mains power.
2. Connect the power supply's output connector to the USB 2.0 Micro B receptacle (c).

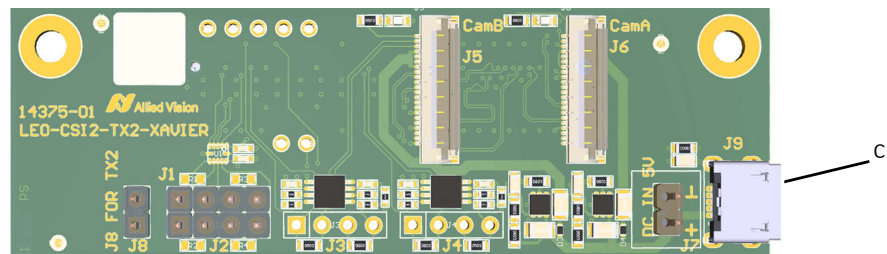


Figure 13: FPC camera connectors of the adapter board

3. Connect the power supply to the mains power.
4. Power and boot the embedded board.

Your Alvium CSI-2 cameras can be operated via the embedded board.

Connecting the I/Os

If you want to use the I/O lines of the **adapter board**, see the following instruction. This way, you reduce signal latencies, such as for triggering the camera by a light barrier



About this instruction

This is a best-practice solution. Please visit www.alliedvision.com/en/about-us/contact-us/technical-support-repair/-rma if you have any questions.

Camera A

Camera A is connected to the embedded board by FPC connector J6 (d).

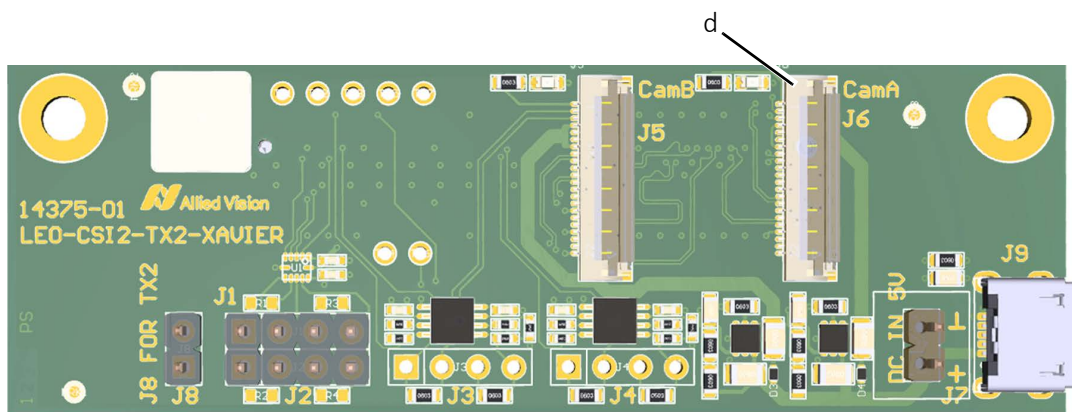


Figure 14: Camera A connection

1. On the pin header (e) on connector J2, use the I/O pins defined in [I/O signal levels and description](#) on page 43.

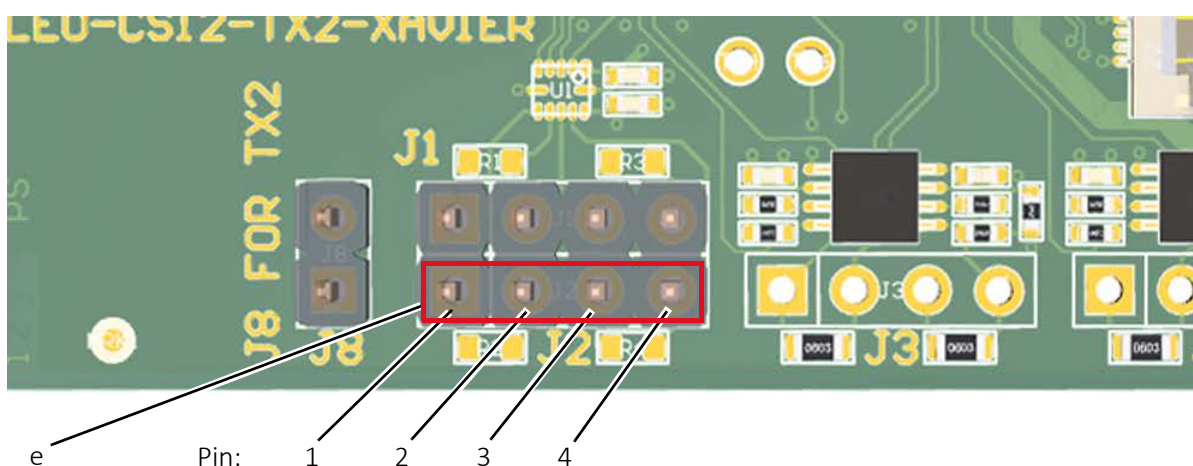


Figure 15: Connecting the I/Os for Camera A

2. For connecting ground, continue with [Connecting ground](#) on page 42.

Camera B

Camera B is connected to the embedded board by FPC connector J5 (f).

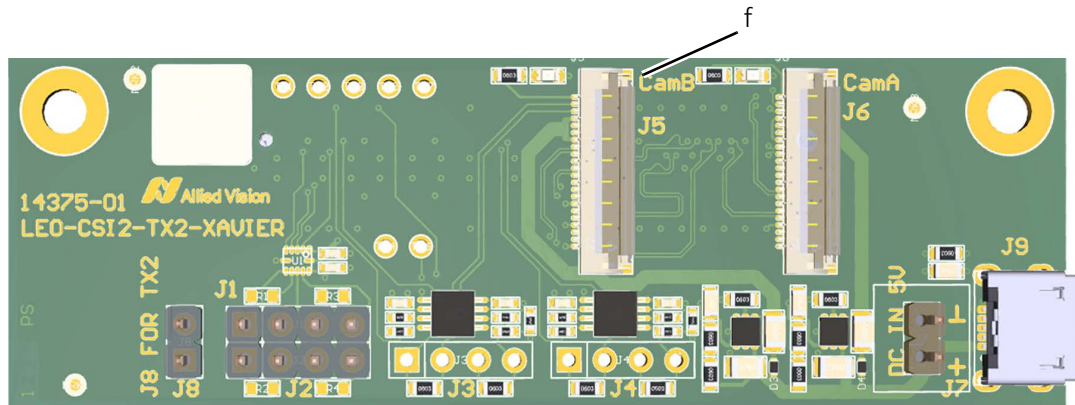


Figure 16: Camera B connection

3. On the pin header (g) on connector J1, use the I/O pins defined in [I/O signal levels and description](#) on page 43.

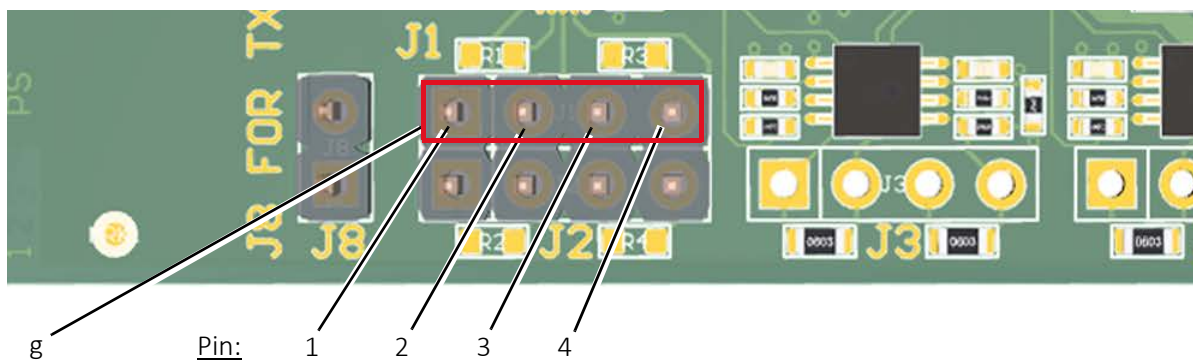


Figure 17: Connecting the I/Os for Camera B

Connecting ground

4. Connect GND to pin 2 (h) of connector J7.

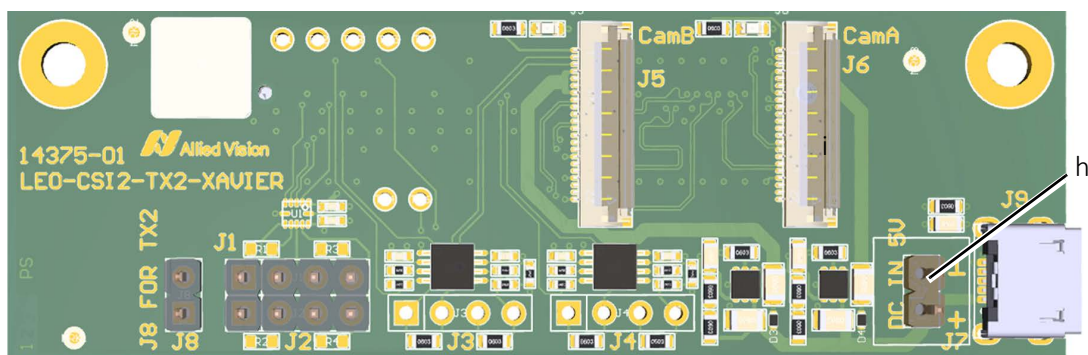


Figure 18: Connecting GND

I/O signal levels and description

Table 5 displays the signals for the GPIOs on connectors J1 and J2, for GND on connector J7, and for VCC-EXT-IN on the USB connector J9.

Connector	Pin	Signal	< - >	Level	Description
J1	1	EXT-GPIO2-B	IN/OUT	$U_{in} (low) = -0.3 \text{ to } 0.8 \text{ VDC}$ $U_{in} (high) = 2.0 \text{ to } 5.5 \text{ VDC}$ $U_{out} (low) = 0 \text{ to } 0.4 \text{ VDC}$ $U_{out} (high) = 2.4 \text{ to } 3.3 \text{ VDC}$ at max. 12 mA	GPIO Internal pull-up resistor: 33 k Ω to 63 k Ω
J1	2	GPIO15_CAM1_PWDN	IN/OUT	$U_{in} (low)^1 = 0 \text{ to } 1.2 \text{ VDC}$ $U_{in} (high)^1 = 2.2 \text{ to } 5.5 \text{ VDC}$ $U_{out} (low) = 0 \text{ to } 0.4 \text{ VDC}$ $U_{out} (high)^1 = 2.9 \text{ to } 3.3 \text{ VDC}$ at max. 50 mA	GPIO Keep external pull-up or pull-down resistor above 50 k Ω
J1	3	EXT-GPIO3-B		See EXT-GPIO2-B	
J1	4	CAM1_MCLK03		See GPIO15_Cam1_PWDN	
J2	1	EXT-GPIO2-A		See EXT-GPIO2-B on connector J1	
J2	2	CAM0_PWDN		See GPIO15_CAM1_PWDN on connector J1	
J2	3	EXT-GPIO3-A		See EXT-GPIO2-B on connector J1	
J2	4	CAM0_MCLK02		See CAM1_MCLK03 on connector J1	
J7	1	VCC-EXT-IN	PWR IN	4.5 to 5.5 VDC	Power supply
J7	2	GND	PWR	0 VDC	Power supply ground
J9	1	VCC-EXT-IN	PWR IN	4.5 to 5.5 VDC	USB power supply

¹Depends on the 3.3 VDC output voltage of the embedded board

Table 5: I/O connections from the adapter board to the camera