

X6000 Server Spare Parts Catalog 03

About This Document

Chassis

HMM and Battery

Hard Disk Backplane

Mounting Ear Plate

M.2 SSD Card

TPM

Fan Module

PSU

DVD Drive

CPU and Auxiliary Device

DIMM

Hard Disk

RAID Controller Card and Supercapacitor

IB Card

SSD Card

NIC

Cable and Optical Module

Search in this manual



Rate and give feedback: ★★★★★

PSU

Table 8-1 PSUs

Spare Part	BOM Number	Description
	02131336	AC-DC Power,5degC,55degC,90V,264V,12V/125A
	02312AHK	Function Module,PAC2000S12-BE,PAC2000S12-BE,Function Module,PAC2000S12-BE,PAC2000S12-BE,Server Platinum 2000W,power supply
	02312AEM	Function Module,PAC3000S12-BH,PAC3000S12-BH,Server Power Platinum 3000W

Translation ▾

즐거찾기

다운로드

Updated: 2018-08-13 ▾

관련 문서

Huawei Server Maintenance Manual 12

Huawei Servers Troubleshooting 24

FusionServer Pro High-Density Server iBMC (V250 or Later) Alarm Handling 23

Share



회사소개

화웨이 소개
화웨이 엔터프라이즈 소개
지사
뉴스룸
화웨이 이벤트

구매 방법

파트너 검색
견적 문의

파트너

파트너 소개 및 분류
파트너 신청 및 인증
파트너 트레이닝 프로그램
파트너 존

관련 자료

커뮤니티
자료 검색
비디오 라이브러리
간행물
사례 연구



APP

