Triple Output, Linear

(4) (17) (17) (17)

1950 950



Selection Guide (Partial)

See pages 10 — 11 for dimension drawings

Triple Output Modules				
Model	Case Size	Output		
		#1	#2	#3
BVA-52A15T0.4	AT	5V @ 2A	9 to 15V @ 0.4A	-9 to 15V @ 0.4A, or -5V @ 0.4A
BVA-53B12T1	ВТ	5V @ 3A	12V @ 1A, or 15V @ 0.8A	-12V @ 1A, or -15V @ 0.8A, or -5V @ 0.4A
BVA-56C12T1.7	СТ	5V @ 6A	12V @ 1.7A, or 15V @ 1.5A	-12V @ 1.7A, or -15V @ 1.5A, or -5V @ 0.7A
BVA-56D12T1	DT	5V @ 6A	12V @ 1A, or 15V @ 1A	-12 V @ 1A, or -15V @ 1A, or -5V @ 0.4A
BVA-58E12T1.7	ET	5V @ 8A	12V @ 1.7A, or 15V @ 1.5A	-12V @ 1.7A, or -15V @ 1.5A, or -5V @ 0.7A
BVA-512F12T3.4	FT	5V @ 12A	12V @ 3.4A, or 15V @ 3A	-12V @ 3.4A, or -15V @ 3A

Options:

Screw Terminals (T): Solder terminals standard. Add "T" for screw terminals, 20A/300V

Overvoltage Protection (OVP): OVP is standard on all 5V main outputs. Add "OVP" to part number for individual OVP module on other models upto 36VDC outputs.

Mounting Spacers: (S): For mounting spacers on any one surface add "S" to part number. Not available on FS and GS case sizes. **Input Fuse (F):** For input fuse and fuse hodler add "F" to part number.

Line Cord (C): For input line cord add "C" to part number. Surge Absorber (M): Input MOV 150V for line voltage of 100-117VAC; and 320V for line voltage of 220-240VAC

