

SonicWall® TZ/SOHO/SonicPoint ACe **Power Supply**

Reference Guide

September 2020

SonicWall® power supplies are for use only with approved SonicWall appliances. See the table below for the current approved SonicWall appliances and supported power supplies.



CAUTION: Use of a power supply with SonicWall appliances that are not approved will void the warranty for that SonicWall appliance and will create an unsafe condition.

Refer to the SonicWall Quick Start Guide or Getting Started Guide for your appliance platform for full installation and safety instructions.

These power supplies are provided as a replacement for a missing power supply or as an additionally required power supply and are provided on an "as is" basis without warranty of any kind.

Power Supply Information

SKU	Power Supply Specifications	Supported Platforms
01-SSC-0709	SNWL PWR SPLY	TZ300 / TZ300W
	Output 12 VDC, 2.0 A	TZ350 / TZ350W
	Input 100-240 VAC	TZ400 / TZ400W
		SOHO 250 / SOHO 250W
		SOHO / SOHO W
		SonicPoint ACe
01-SSC-0437	SNWL PWR SPLY	TZ500 / TZ500W
	Output 12 VDC, 3.0 A	
	Input 100-240 VAC	
01-SSC-0280	SNWL PWR SPLY	TZ600
	Output 12 VDC, 5.0 A	
	Input 100-240 VAC	
02-SSC-3069	SNWL PWR SPLY	TZ270 / TZ270W
	Output 12 VDC, 3.0 A	TZ370 / TZ370W
	Input 100-240 VAC	TZ470 / TZ470W
02-SSC-3078	SNWL PWR SPLY	TZ570 / TZ570W
	Output 12 VDC, 5.0 A	TZ670
	Input 100-240 VAC	

About This Document

Legend



WARNING: A WARNING icon indicates a potential for property damage, personal injury, or death.



CAUTION: A CAUTION icon indicates potential damage to hardware or loss of data if instructions are not followed.



IMPORTANT, NOTE, TIP, MOBILE, or VIDEO: An information icon indicates supporting information.

Copyright © 2020 SonicWall Inc. All rights reserved.

This product is protected by U.S. and international copyright and intellectual property laws. SonicWall is a trademark or registered trademark of SonicWall Inc. and/or its affiliates in the U.S.A. and/or other countries. All other trademarks and registered trademarks are property of their respective owners.

The information in this document is provided in connection with SonicWall Inc. and/or its affiliates' products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of SonicWall products. EXCEPT AS SET FORTH IN THE TERMS AND CONDITIONS AS SPECIFIED IN THE LICENSE AGREEMENT FOR THIS PRODUCT, SONICWALL AND/OR ITS AFFILIATES ASSUME NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON- INFRINGEMENT. IN NO EVENT SHALL SONICWALL AND/OR ITS AFFILIATES BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF SONICWALL AND/OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SonicWall and/or its affiliates make no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserve the right to make changes to specifications and product descriptions at any time without notice. SonicWall Inc. and/or its affiliates do not make any commitment to update the information contained in this document.

For more information, visit https://www.sonicwall.com/legal.

To view the SonicWall End User Product Agreement, go to: https://www.sonicwall.com/legal/license-agreements.

Last updated: 9/15/2020 232-005207-51 Rev A

