



SENSECAP

THE NEW GENERATION LORAWAN SENSORS OF SENSECAP

# S2120 8-in-1 Weather Station User Guide

Version: v1.0.4



# Table of Contents

<b>1. Product Introduction .....</b>	<b>3</b>
1.1 Introduction .....	3
1.2 Quick Start Guide .....	3
<b>2. Part List .....</b>	<b>4</b>
<b>3. Key Parameters of the Sensor .....</b>	<b>5</b>
<b>4. Pre-Installation .....</b>	<b>6</b>
4.1 Diagram .....	6
4.2 Install the Wind Sensor .....	6
4.3 Install the Rain Gauge .....	7
4.4 Power Supply Mode .....	7
4.4.1 Install the battery with built-in box .....	8
4.4.2 Install the battery with external box .....	9
<b>5. LED of Sensor Working Status .....</b>	<b>13</b>
<b>6. SenseCAP Mate App .....</b>	<b>15</b>
6.1 Download App .....	15
6.2 How to connect sensor to App .....	16
6.2.1 Create a New Account .....	16
6.2.2 Connect to Sensor to App .....	17
6.3 Configure parameters through App .....	19
6.3.1 Select the Platform and Frequency .....	19
6.3.2 Set the Interval .....	23
6.3.3 Set the EUI and Key .....	23
6.3.4 Set the Packet Policy .....	24
6.3.5 Set the Activation Type .....	24
6.3.6 Restore Cumulative Rainfall .....	25
6.3.7 Restore Factory Setting .....	26
<b>7. Connect to the SenseCAP Portal .....</b>	<b>27</b>
7.1 SenseCAP Portal .....	27
7.1.1 Create a New Account .....	27
7.1.2 Other Functions .....	28
7.1.3 API Instruction .....	28
7.2 Connect to SenseCAP with Helium Network .....	29
7.2.1 Quick Start .....	29
7.2.2 Preparation .....	29
7.2.3 Bind Sensor to SenseCAP Portal .....	30
7.2.4 Setup the Sensor .....	32

---

7.2.5	Set Frequency of Sensor via SenseCAP Mate App .....	33
7.2.6	Check Data on SenseCAP Portal .....	34
7.3	Connect to SenseCAP with private TTN .....	35
7.3.1	Quick Start .....	35
7.3.2	Preparation .....	35
7.3.3	Bind Sensor to SenseCAP Portal .....	36
7.3.4	Setup the Sensor .....	36
7.3.5	Set Frequency of Sensor via SenseCAP Mate App .....	36
7.3.6	Check Data on SenseCAP Portal .....	37
<b>8.</b>	<b>Connect to Helium Network .....</b>	<b>38</b>
<b>9.</b>	<b>Connect to The Things Network .....</b>	<b>38</b>
<b>10.</b>	<b>Payload Decoder .....</b>	<b>39</b>
10.1	Decoder Code .....	39
10.2	Packet Parsing .....	40
10.3	Data Parsing Example .....	42
10.3.1	Measurement data packets .....	42
10.3.2	Battery information packets .....	45
<b>11.</b>	<b>LoRaWAN Downlink Command .....</b>	<b>47</b>
11.1	Set the Data Uplink Interval .....	47
11.2	Reboot the device .....	49
11.3	How to send downlink .....	49
<b>12.</b>	<b>Device Installation .....</b>	<b>50</b>
12.1	Select an Appropriate Installation Location .....	50
12.2	Installing the Weather Station .....	50
12.2.1	Adjust the solar panel .....	50
12.2.2	Install the Mounting Pole .....	52
12.2.3	Direction Alignment .....	54
12.2.4	Recommendation for best wireless communication .....	55
<b>13.</b>	<b>Trouble Shooting .....</b>	<b>57</b>
13.1	Maintenance of Weather Station .....	57
13.2	Sensors can't join LoRa network, how to do? .....	57
13.3	How to obtain the cumulative rainfall from the past ten minutes? .....	57
13.4	The wind direction degrees and corresponding direction diagram .....	58
13.5	Battery Life Prediction .....	58
13.6	Support .....	58
13.7	Document Version .....	59

---



# 1. Product Introduction

## 1.1 Introduction

The S2120 Weather Station monitoring Air Temperature, Humidity, Wind Speed/Direction, Rainfall Intensity, Light, UV Index, and Barometric Pressure measurements provides you with hyperlocal weather at your fingertips.

Perfect for home, office, or business use, this professional home weather station allows you to monitor your backyard weather conditions from anywhere. Protect your family, the house, and your garden with minutes updates in weather changes. Additionally, S2120 weather stations also support applications in agriculture, meteorology, urban environmental monitoring and other scenarios.

Smart and connected, the S2120 provides data on your phone, tablet, computer browser. We provide the SenseCAP Mate App, users can quickly view data via the App. We also provide SenseCAP Portal to manage your weather station through the Web page.

The S2120 is a standard LoRaWAN sensor that can be connected to any LoRaWAN gateway and service.








## 1.2 Quick Start Guide

Step	Description	Section
Step 1	Install the battery	4.4
Step 2	Download App and configure parameters	6.1, 6.3
Step 3	Connect to SenseCAP Portal	7
	Connect to Helium Console	8
	Connect to TTN Server	9

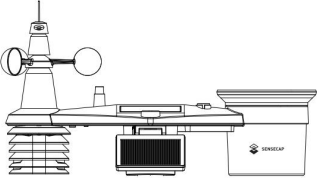

## 2. Part List

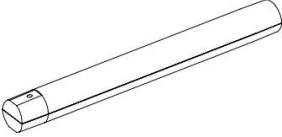Before installing, please check the part list to ensure nothing is missing.

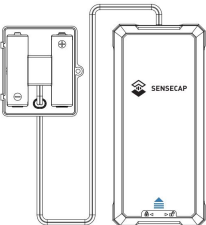Picture	Name	Quantity
	Weather Station	1
	Pole mounting stand	1
	Mounting clamp	1
	Plastic pole	1
	Screw, Hex nut and Flat washer	4
	Screw and Hex nut	1
	External battery box (6*AA battery size, 2m cable)	1



### 3. Key Parameters of the Sensor


Using the LoRaWAN protocol generally involves the following parameters.

Parameters		Description
LoRaWAN Version	MAC	v1.0.3
Join Type		OTAA (Default) ABP (It can be modified via App)
Device EUI		Unique identification of device, one of the join network parameters on OTAA mode. (It can be got via App)
Device Code (KEY)		On the device label, for device binding and API call.
App EUI		Unique identification of application, one of the join network parameters on OTAA mode. (It can be got via App)
App Key		Application key, one of the join network parameters on OTAA mode. (It can be got via App)
DevAddr		This parameter is available only in ABP mode, one of the join network parameters.
NwkSkey		This parameter is available only in ABP mode, one of the join network parameters.
AppSkey		This parameter is available only in ABP mode, one of the join network parameters.



## 4. Pre-Installation

### 4.1 Diagram

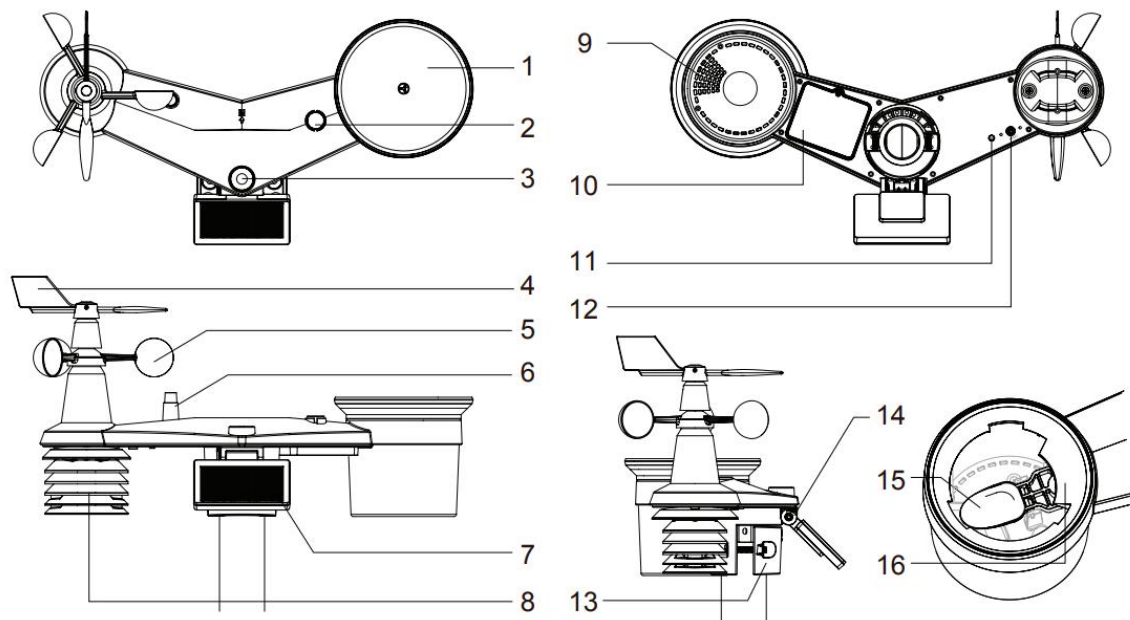

1. Rain gauge	9. Drain holes
2. Balance indicator	10. Built-in battery box
3. UV and Light Intensity sensor	11. Red LED indicator
4. Wind vane	12. Config button
5. Wind cups	13. Mounting clamp
6. Antenna	14. Adjustable hinge of solar panel
7. Solar panel	15. Tipping bucket
8. Radiation shield, temperature and humidity sensor, barometric pressure sensor	16. Rain sensor


### 4.2 Install the Wind Sensor

With reference to photo below, locate and align the flat are on the wind vane shaft to the

flat surface on the wind vane and push the vane onto the shaft. Tighten the set screw with a




precision screwdriver.

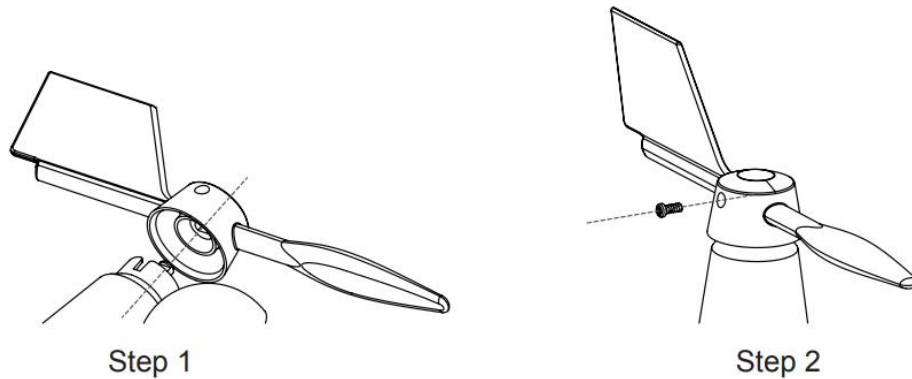

### 4.3 Install the Rain Gauge

Install the rain gauge funnel and rotate clockwise to lock the funnel to the weather station.

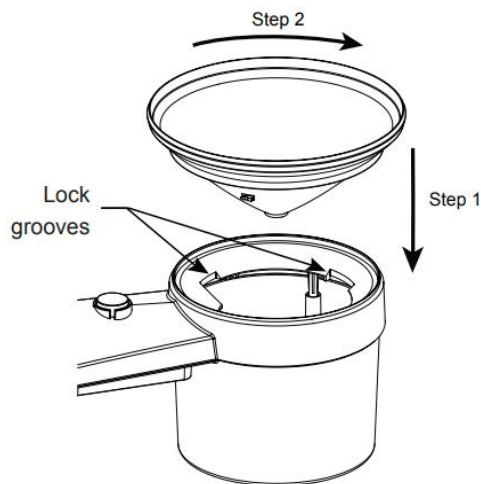

### 4.4 Power Supply Mode

Weather stations do not contain batteries, so additional batteries are required.

The sensor is powered by a combination of solar panels and batteries. When the solar panels are working, the device is powered by the solar panels; When solar energy is low, it is powered by batteries.

Different types of batteries affect the operating temperature range of the sensor. In addition, Different number of batteries determines the battery life of the sensor.





Battery schemes	Advantage and disadvantage
3 * 1.5V AA alkaline battery, built-in battery box	The operating temperature of the sensor depends on the operating temperature of the battery. If the alkaline battery is used, the operating temperature range is -20 ~ 60°C.
3 * 1.5V AA Lithium battery, built-in battery box	If the alkaline battery is used, the operating temperature range is -40 ~ 60°C.
6 * 1.5V AA alkaline battery, external battery box	It will last twice as long as 3 x batteries.
6 * 1.5V AA alkaline battery, external battery box	It will last twice as long as 3 x batteries.

**Note:**

*The battery box does not have the charging capability. Therefore, non-rechargeable batteries are recommended. If you choose a rechargeable battery, you need to take out the battery and charge it separately after the battery is exhausted.*


#### 4.4.1 Install the battery with built-in box

**Step 1:** Unscrew the battery door at the bottom of weather station.

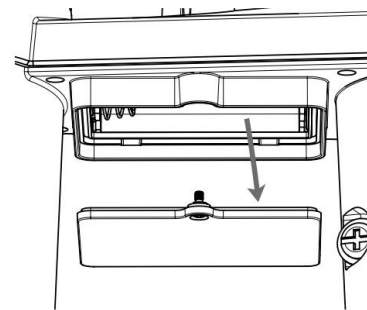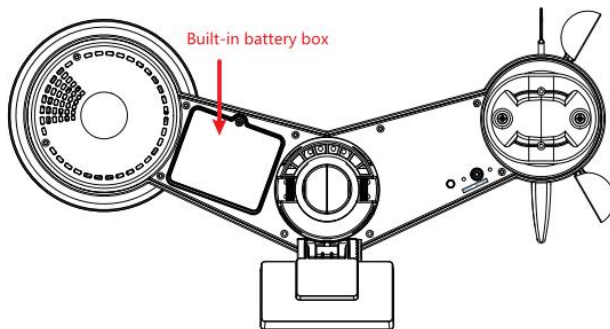




**Step 2:** Insert the 3 AA batteries according to the +/- polarity indicated. Then close the battery door.

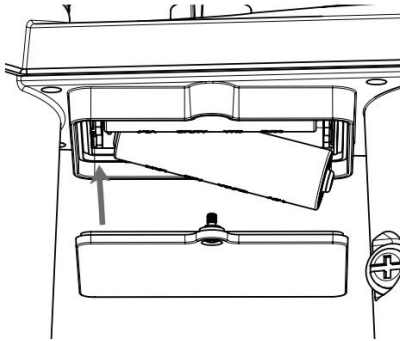


**Step 3:** Tighten the battery door screw. Once the installation completed, the red LED indicator at the bottom of the weather station will be flashing.

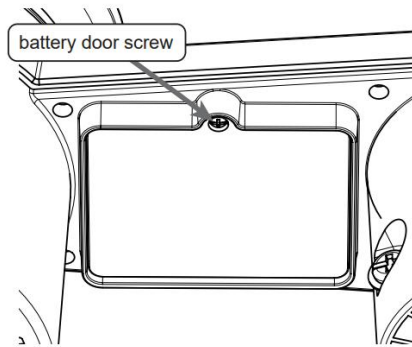


#### 4.4.2 Install the battery with external box


**Step 1:** Slide the battery box lock switch to unlock position. Push to open the battery box door according to the arrow direction.

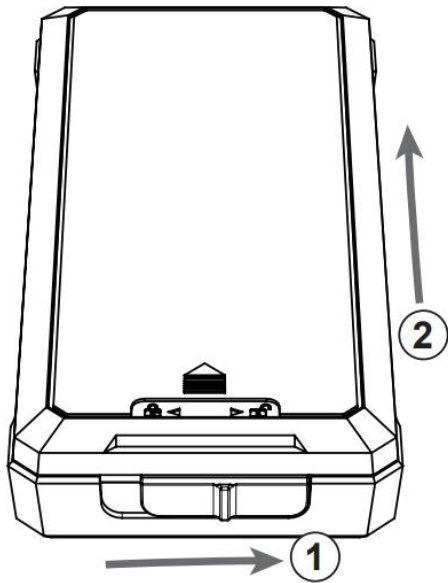



**Step 2:** Insert the 6 AA batteries according to the +/- polarity indicated.

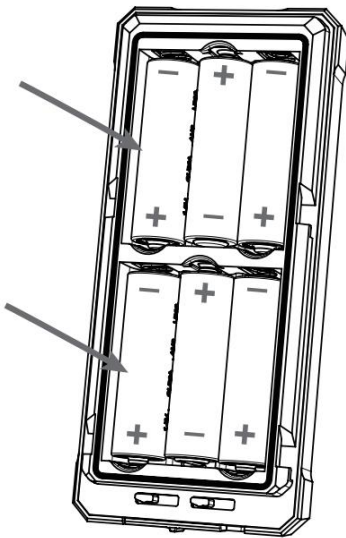


**Step 3:** Place and lock the battery box door.

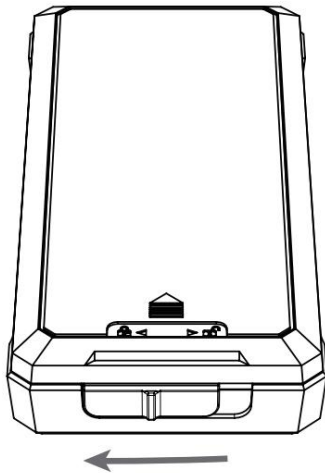

**Step 4:** Unscrew the battery door at bottom the of weather station.

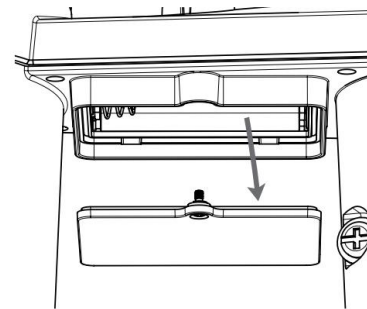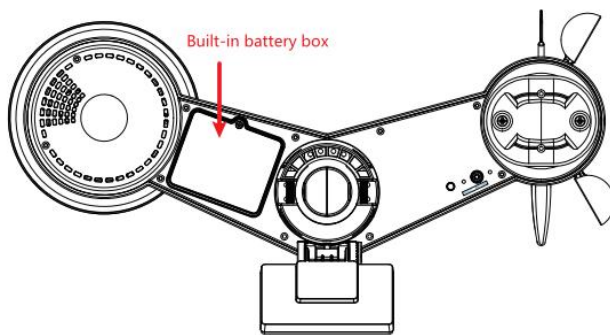

**Step 5:** Insert the dummy battery to the battery compartment, make sure the “OUTSIDE” marking faces outside and the +/- polarity in correct orientation.

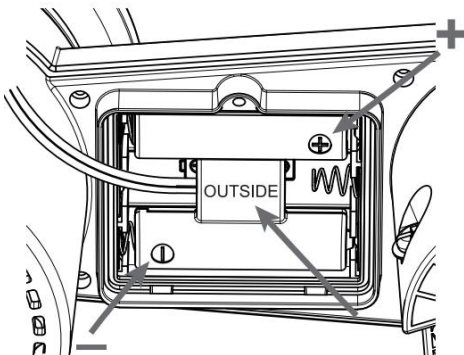


**Step 6:** Replace with the battery door which come along with the external battery box, then tighten the battery door screw. Once the installation completed, the red LED indicator at the bottom of the weather station will be flashing.




**Note:**

*If the dummy battery is not installed in correct orientation, battery power connection will be failure and the LED indicator will not be flashing.*

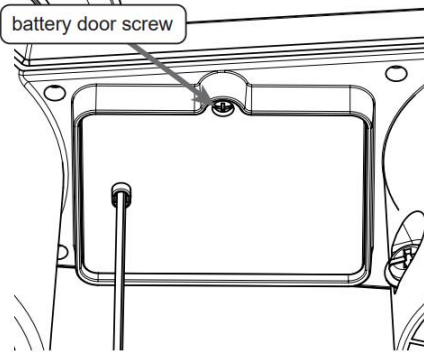


**Step 7:** Use the cable ties to mount the battery box onto the mounting pole.

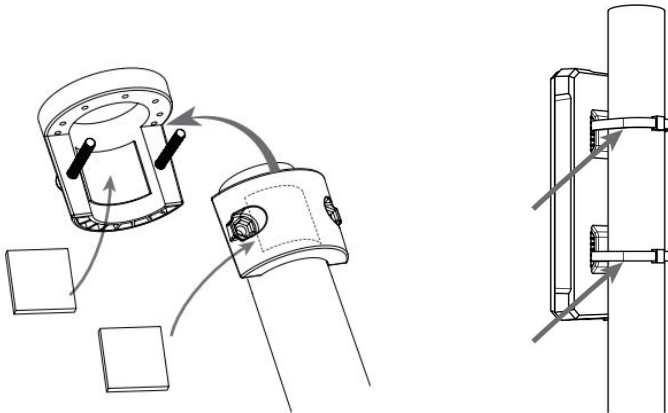



## 5. LED of Sensor Working Status

At the bottom of the weather station are buttons and indicators:

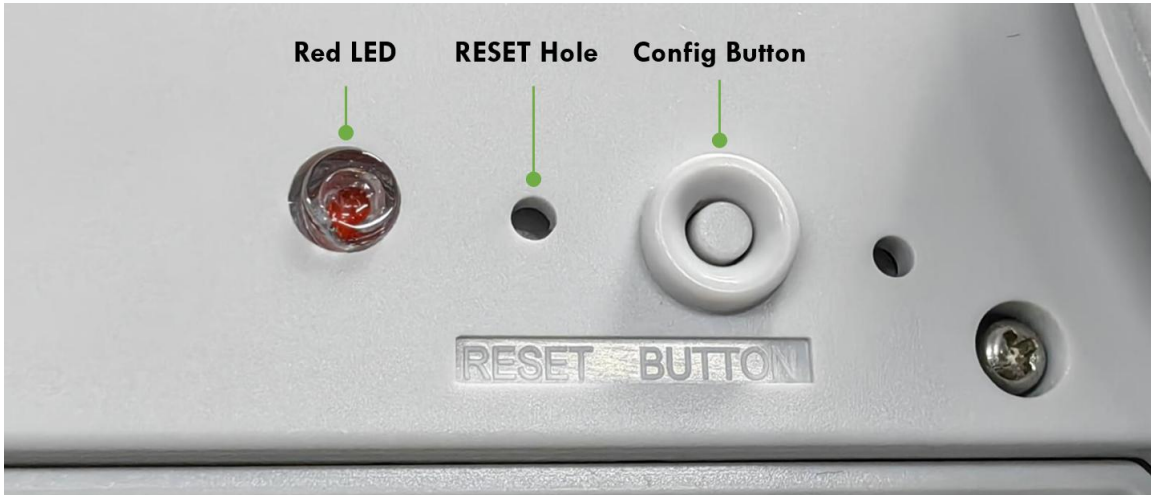

You can refer to the LED indicator for the Sensor for its working status. Please see the status explanations in the chart below:

Actions	Description	Green LED Status
Install the battery, power on for the first time	Power on and activate the Bluetooth	The red LED light will be on. It needs to connect Bluetooth and configure the frequency.
Press "config button" once	Reboot device and join LoRa network	<ol style="list-style-type: none"><li>1. Waiting for join LoRa network: the led breathing light flashing</li><li>2. Join LoRa network success: LED flashes fast for 2s, then go out</li><li>3. LoRa network join failure: LED will always breathe flashing</li></ol>
Press "config button" and hold for 3s	The sensor will be restored to factory Settings	LED flashes fast for 3s



**Note:**

---

*After the battery is installed for the first time, you must connect the Bluetooth and configure the frequency to join LoRaWAN network and work normally. If the frequency is not set, the red LED is steady on.*

---



## 6. SenseCAP Mate App

### 6.1 Download App

As a tool, SenseCAP Mate App is used to config LoRa parameters, set interval, bind devices to your account and check device basic information.

- (1) For iOS, please search for “SenseCAP Mate” in the App Store and download it.



Download SenseCAP Mate App

- (2) For Android, please search for “SenseCAP Mate” in the Google Store and download it.

You can also download App from <https://www.pgyer.com/sensecapmate>




## 6.2 How to connect sensor to App

### 6.2.1 Create a New Account

SenseCAP Mate supports device configuration and remote management. To use the SenseCAP Portal platform and other functions, please register an account.

SenseCAP Mate supports offline functionality, and you can opt out of an account if you only use the configuration sensor. Just click **Skip**.

Please select **Global** of Server Location.

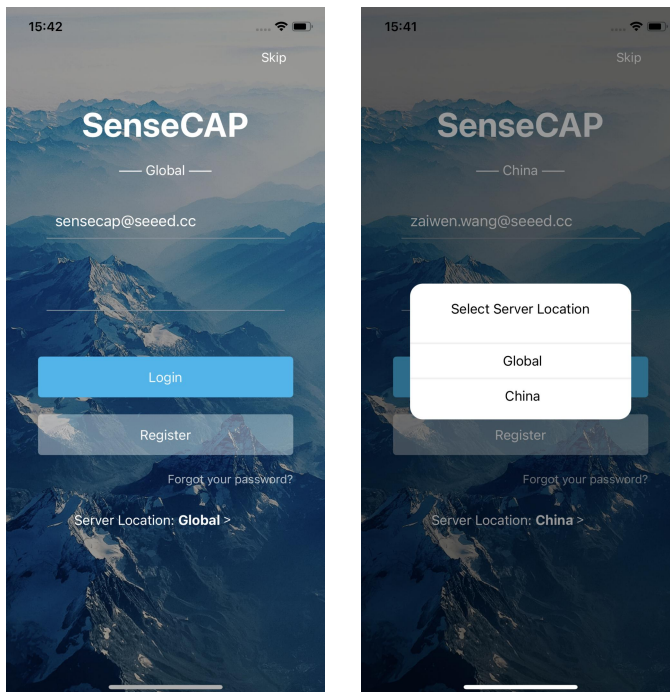

You can also create an account via the SenseCAP Portal: <http://sensecap.seeed.cc>

- 1) Select register account, enter email information and click "register", the registered email will be sent to the user's mailbox.
- 2) Open the "SenseCAP..."Email, click the jump link, fill in the relevant information, and complete the registration.
- 3) Return to the login interface and complete the login.



#### **Note:**

*If you can't find the email, it may be automatically identified as "spam" and put in the "trash can".*





## 6.2.2 Connect to Sensor to App

- 1) After the battery is installed, the red LED will be steady on. Also activate Bluetooth.





- 2) Please select "S2120 Weather Station".

Please click the "Setup" button to turn on Bluetooth and click "Scan" to start scanning the sensor's Bluetooth.

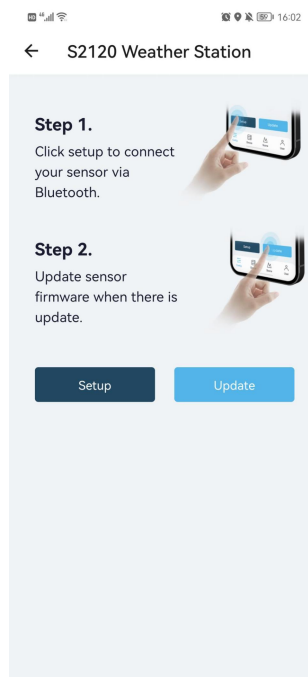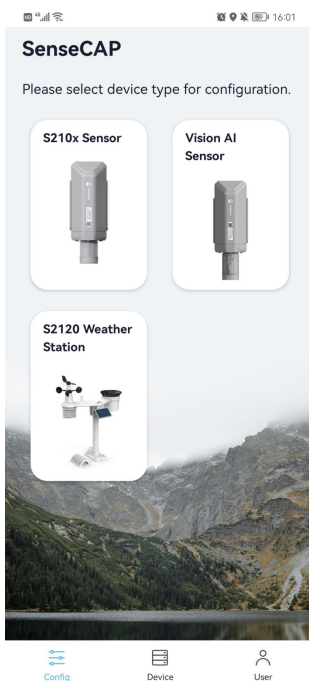

- 3) Enter the pairing password. **The default password is 000000.**
- 4) Select the Sensor by BT ID (BT ID is on the bottom label of the sensor). Then, the basic information of the sensor will be displayed after entering.

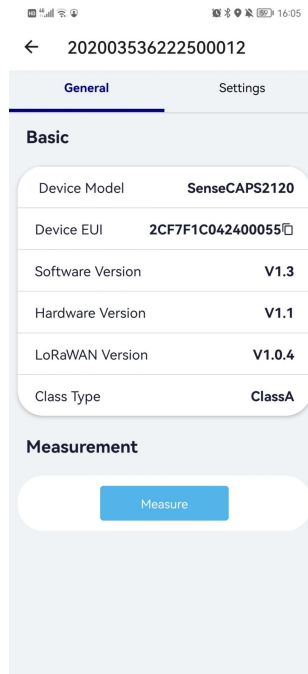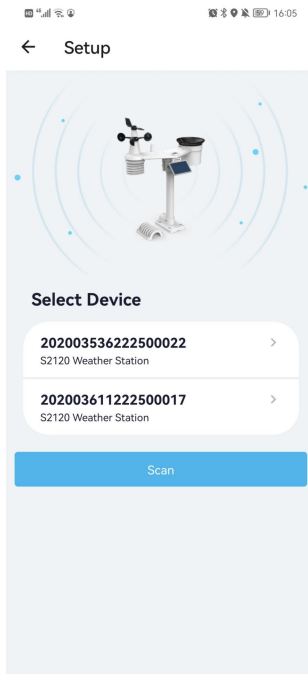




## 6.3 Configure parameters through App

### 6.3.1 Select the Platform and Frequency

S2120 weather stations are manufactured to support universal frequency plan from 863MHz ~928MHz in one SKU. That is to say, every single device can support 7 frequency plans.

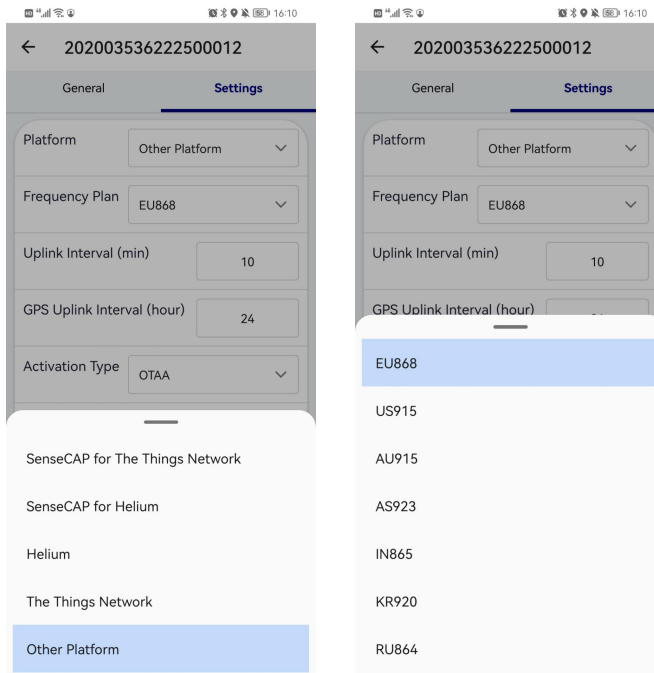

Platform	Description
SenseCAP for The Things Network	<b>Default platform.</b> It must be used with SenseCAP Outdoor Gateway ( <a href="https://www.seeedstudio.com/LoRaWAN-Gateway-EU868-p-4305.html">https://www.seeedstudio.com/LoRaWAN-Gateway-EU868-p-4305.html</a> ). SenseCAP builds a proprietary TTN server that enables sensors to be used out of the box when paired with an SenseCAP outdoor gateway.
SenseCAP for Helium	When there is the Helium network around the user, data can be uploaded using sensors. Devices run on a private Helium console of SenseCAP. Users do not need to create devices on Helium console, right out of the box.
Helium	Connect Sensor to public Helium console.
The Things Network	Connect Sensor to your TTN(TTS) server.
Other Platform	Other LoRaWAN Network Server.



## 1) SenseCAP for Helium:


We provide the SenseCAP Portal to manage devices and data: [sensecap.seeed.cc](https://sensecap.seeed.cc)

We built a private Helium Console with an embedded SenseCAP Portal. When users get the SenseCAP sensors, you can use it by scanning the code and binding it to the Portal.

“SenseCAP for Helium” is selected by default. The device runs in a fixed main frequency and sub-band, refer to Helium Frequency Plan (<https://docs.helium.com/lorawan-on-helium/frequency-plans/>). You only need to select the main frequency, such as EU868 and US915.

SenseCAP for Helium supports the following frequency plan:

EU868 / US915 / AU915 / KR920 / IN865 / AS923-1 / AS923-2 / AS923-3 / AS923-4

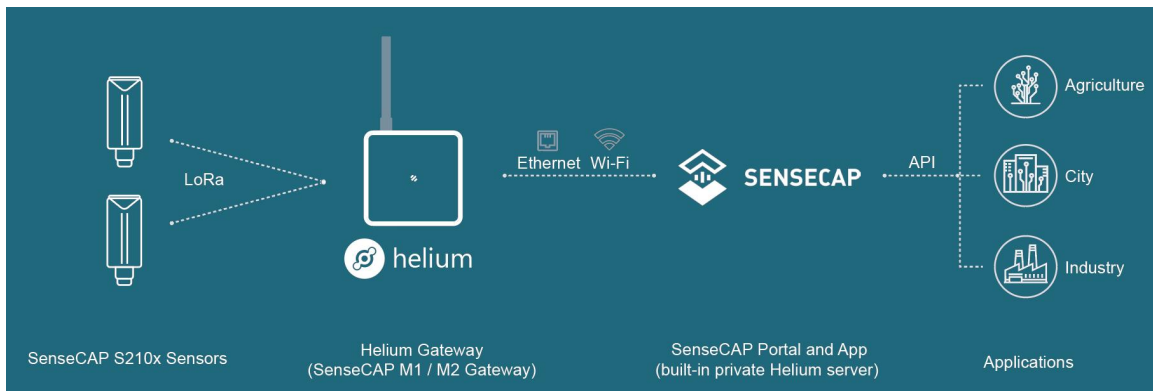

## 2) SenseCAP for The Things Network


SenseCAP Portal also builds the TTN private server, and the sensor must be used together with the SenseCAP Outdoor Gateway (<https://www.seeedstudio.com/LoRaWAN-Gateway-EU868-p-4305.html>).

Due to the limitation of the SenseCAP outdoor gateway frequency, “SenseCAP for TTN” supports the following frequency plan(The sensor is capable of supporting all frequency plan):

Gateway Frequency	Description
EU868	It must be used with SenseCAP EU868 Gateway ( <a href="https://www.seeedstudio.com/LoRaWAN-Gateway-">https://www.seeedstudio.com/LoRaWAN-Gateway-</a>



	<a href="https://www.seeedstudio.com/LoRaWAN-Gateway-US915-p-4305.html">EU868-p-4305.html</a> )
US915	It must be used with SenseCAP US915 Gateway ( <a href="https://www.seeedstudio.com/LoRaWAN-Gateway-US915-p-4306.html">https://www.seeedstudio.com/LoRaWAN-Gateway-US915-p-4306.html</a> )
AU915	Need to contact sales to purchase.
AS923-1	Need to contact sales to purchase.
AS923-2	Need to contact sales to purchase.

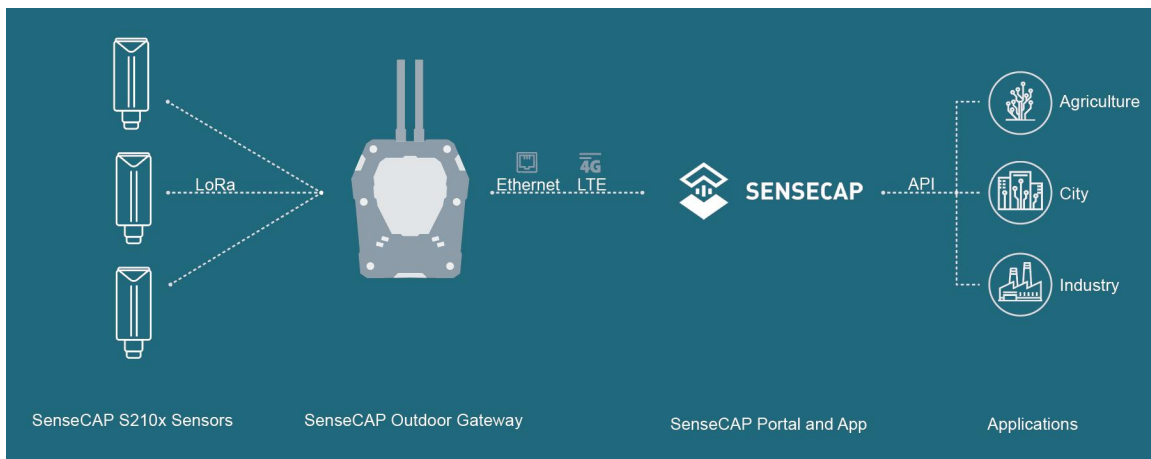

### 3) Helium

Users can choose sensors to use on the public helium console:

<https://console.helium.com/>

### 4) The Things Network

Users can choose sensors to use on the public The Things Network server:

<https://console.cloud.thethings.network/>

### 5) Other Platform:

When you use other LoRaWAN network server, please select Other Platform.

At this point, you need to determine the sensor frequency band according to the gateway frequency and sub-band.



S210x Sensors support the following frequency plan:

Sensor Frequency	Common Name	Sub-band
EU863-870	EU868	-----
US902-928	US915	Sub band from 1 to 8 (default sub-band 2)
AU915-928	AU915	Sub band from 1 to 8 (default sub-band 2)
KR920-923	KR920	-----
IN865-867	IN865	-----
AS923	AS923-1	Frequency plan for Helium
	AS923-2	
	AS923-3	
	AS923-4	
RU864-867	RU864	-----

**Note1:**

*Different countries and LoRa WAN network servers use different frequency plans.*

*For Helium network, please refer to:*

<https://docs.helium.com/lorawan-on-helium/frequency-plans>

*For The Things Network, please refer to:*

<https://www.thethingsnetwork.org/docs/lorawan/frequency-plans/>

**Note2:**

- 1) When using the SenseCAP platform, the EUI, APP EUI and APP Key are fixed and are the same as the sensor label.
- 2) When the sensor is selected to be used with a public platform such as Helium or TTN, the EUI will not change, and the sensor **will generate a new fixed App EUI and App Key** for network access.



### 6.3.2 Set the Interval

The working mode of device: wake up the device every interval and collect measurement values and upload them through LoRa. For example, the device collects and uploads data **every 60 minutes by default**.

Parameter	Type
Uplink Interval	Unit: minutes, number from 1 to 1440.

Uplink Interval (min)	<input type="text" value="60"/>
-----------------------	---------------------------------

**Note:**

*The SenseCAP portal has a limit on uplink interval: minimum interval is 5 minutes.*

*The interval using the other platforms ranges from 1 to 1440 minutes.*

### 6.3.3 Set the EUI and Key

The device uses OTAA to join the LoRaWAN network by default. So, it can set the device EUI and App EUI.

Parameter	Type
Device EUI	16 bits, hexadecimal from 0 ~ F
App EUI	16 bits, hexadecimal from 0 ~ F
App Key	32 bits, hexadecimal from 0 ~ F

Device EUI	<input type="text" value="2CF7F1C04160000B"/>
APP EUI	<input type="text" value="577D1C6ECDCC3B8D"/>
APP Key	<input type="text" value="466F991B963100CC478..."/>



### 6.3.4 Set the Packet Policy

The sensor uplink packet strategy has three modes.

Packet Policy

1N

▼

Restore Factory

Send

Parameter	Description
2C+1N (default)	2C+1N (2 confirm packets and 1 none-confirm) is the best strategy, the mode can minimize the packet loss rate, however the device will consume the most data packet in TTN, or data credits in Helium network.
1C	1C (1 confirm) the device will sleep after get 1 received confirm packet from server.
1N	1N (1 none-confirm) the device only send packet and then start to sleep, no matter the server received the data or not.

### 6.3.5 Set the Activation Type

The sensor supports two network access modes, OTAA by default.

Parameter	Description
OTAA (default)	Over The Air Activation, it joins the network through Device EUI, App EUI, and App Key.
ABP	Activation By Personalization, it joins the network through DevAddr, NwkSkey, and AppSkey.

When using ABP mode, you need to configure the following information:

Parameter	Description
DevAddr	32 bits, hexadecimal from 0 ~ F
NwkSkey	32 bits, hexadecimal from 0 ~ F



AppSkey	8 bits, hexadecimal from 0 ~ F
---------	--------------------------------

Activation Type

ABP



Nwk Skey

D65CF04A554CB71ECCC0D58C40

ⓘ Only hexadecimal numbers of 0-F with a maximum of 32 digits are allowed to be filled in.

APP Skey

24CEAFD65CF04A554CB71ECCC0

ⓘ Only hexadecimal numbers of 0-F with a maximum of 32 digits are allowed to be filled in.

Dev Addr

0100000A

ⓘ Only hexadecimal numbers of 0-F with a maximum of 8 digits are allowed to be filled in.



**Note:**

*The factory defaults to a fixed value.*

### 6.3.6 Restore Cumulative Rainfall

Clear the Cumulative Rainfall record with the "Clear Rainfall" button. This function clears device register information about Cumulative Rainfall.

#### Measurement

Clear Rainfall

Measure




**Note:**

*This data will be cleared when it reaches 999,999,999.*



### 6.3.7 Restore Factory Setting

When selecting the SenseCAP platform, you must use the fixed EUI/App EUI/App Key. Therefore, you need to restore the factory Settings before switching back to the SenseCAP platform from other platforms.

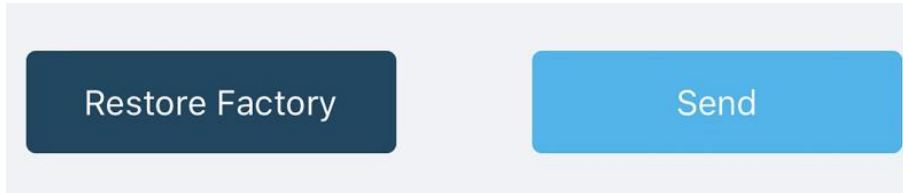


When we make a mistake or want to reset everything, we can click the button. The device will be restored to the factory's default configuration.



## 7. Connect to the SenseCAP Portal

### 7.1 SenseCAP Portal

The main function of the SenseCAP Portal is to manage SenseCAP devices and to store data. It is built on Azure, a secure and reliable cloud service from Microsoft. You can apply for an account and bind all devices to this account. SenseCAP provides the web portal and API. The web portal includes Dashboard, Device Management, Data Management, and Access Key Management, while API is open to users for further development.

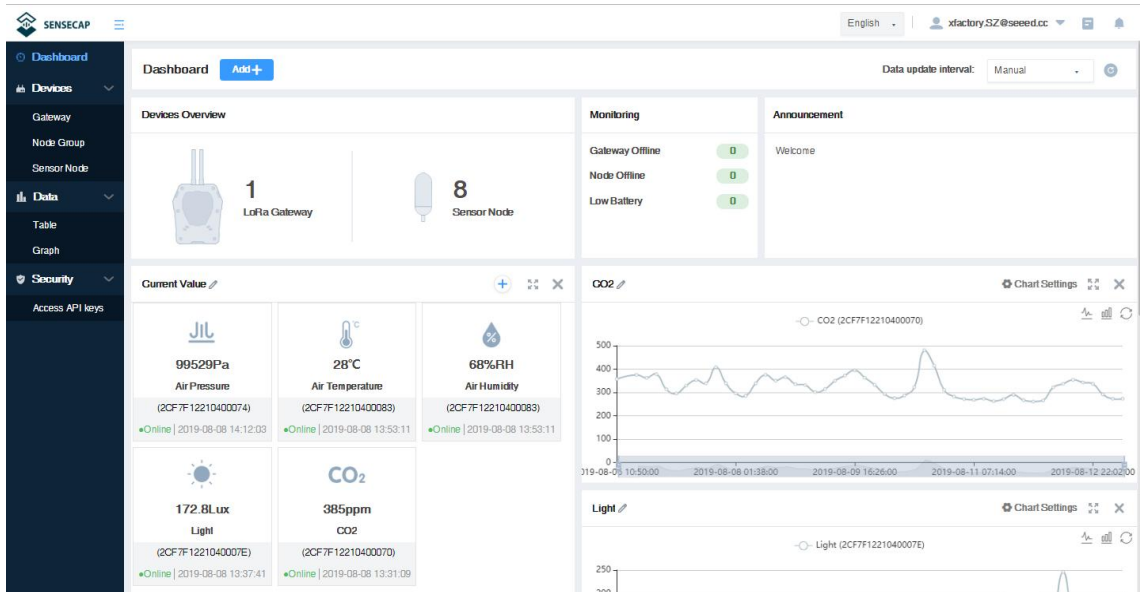

#### 7.1.1 Create a New Account

Portal Website: <http://sensecap.seeed.cc>

- 4) Select register account, enter email information and click "register", the registered email will be sent to the user's mailbox.
- 5) Open the "SenseCAP..."Email, click the jump link, fill in the relevant information, and complete the registration.
- 6) Return to the login interface and complete the login.



#### Note:

*If you can't find the email, it may be automatically identified as "spam" and put in the "trash can".*



## 7.1.2 Other Functions

- **Dashboard:** Including Device Overview, Announcement, Scene Data, and Data Chart, etc.
- **Device Management:** Manage SenseCAP devices.
- **Data Management:** Manage data, including Data Table and Graph section, providing methods to search for data.
- **Subaccount System:** Register subaccounts with different permissions.
- **Access Key Management:** Manage Access Key (to access API service), including Key Create, Key Update, and Key Check.



**Note:**


**SenseCAP Portal User Guide:** <https://sensecap-docs.seeed.cc/quickstart.html>

## 7.1.3 API Instruction

SenseCAP API is for users to manage IoT devices and data. It includes 3 types of API methods: HTTP protocol, MQTT protocol, and Websocket protocol.

- With HTTP API, users can manage LoRa devices, to get raw data or historical data.
- With MQTT API, users can subscribe to the sensor's real-time measurement data through the MQTT protocol.
- With Websocket API, users can get real-time measurement data of sensors through Websocket protocol.

Please refer to this link for API User Guide: <https://sensecap-docs.seeed.cc/>

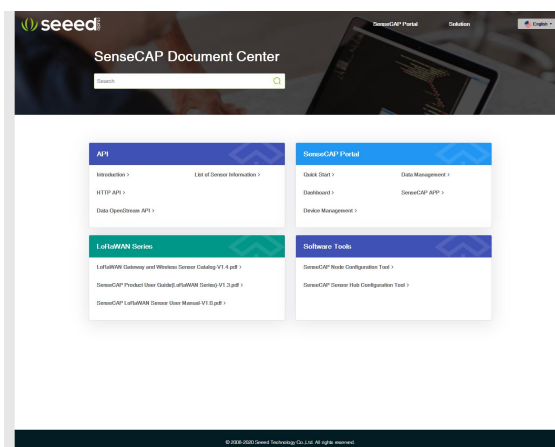




## 7.2 Connect to SenseCAP with Helium Network

### 7.2.1 Quick Start

Follow this process to quickly use the sensor, see the following section for details.

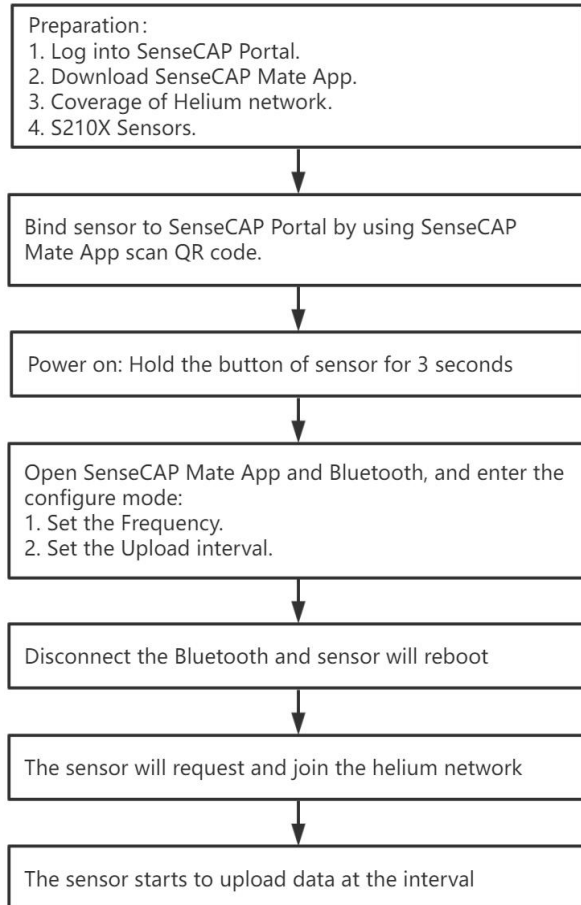

### 7.2.2 Preparation

#### 1) SenseCAP Mate App


Download the App, please refer to [section 5](#) for using.

#### 2) Coverage of Helium network

**Option 1:** Use the Helium network that already exists nearby.

Please refer to the map, search your location to see if there's any helium network around: <https://explorer.helium.com/>

A green hexagon indicates the presence of the network.

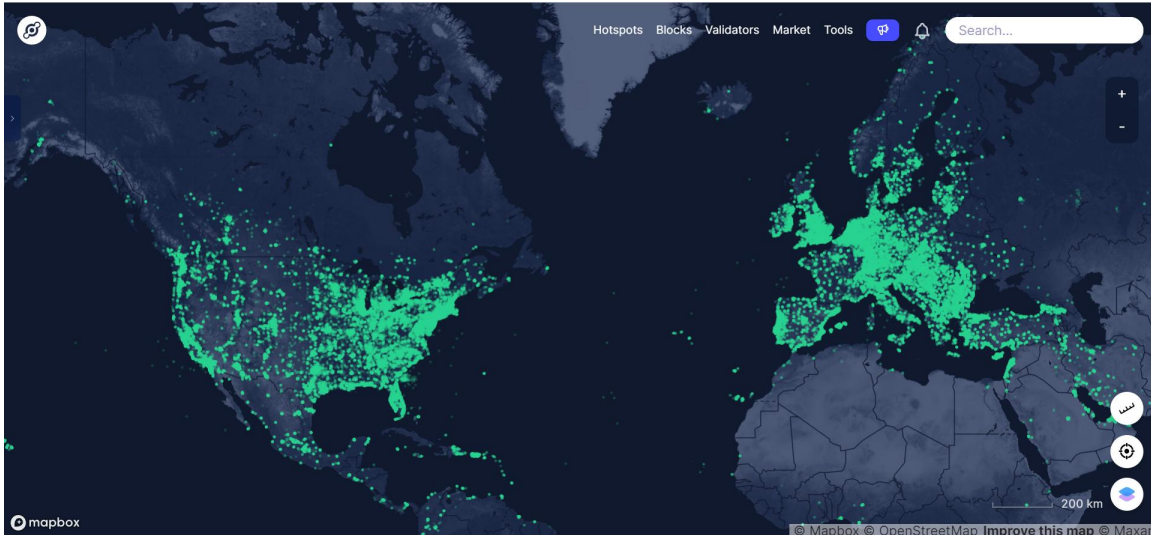

**Option 2:** Deploy a new Helium gateway.


You can purchase M1, M2 gateways to cover your surroundings with the Helium network: <https://www.sensecapmx.com/>

### 7.2.3 Bind Sensor to SenseCAP Portal


Please open SenseCAP Mate App.

#### (I) Scan QR Code

- 1) Click “Add device” on the upper-right corner of device page to enter the device binding page.

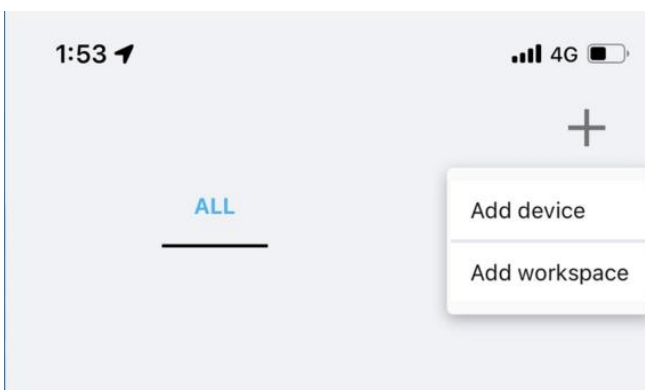

- 2) Scan the QR code on the device to bind the device to your account. If you do not set it to a designated group, the device will be put into the “default” group.

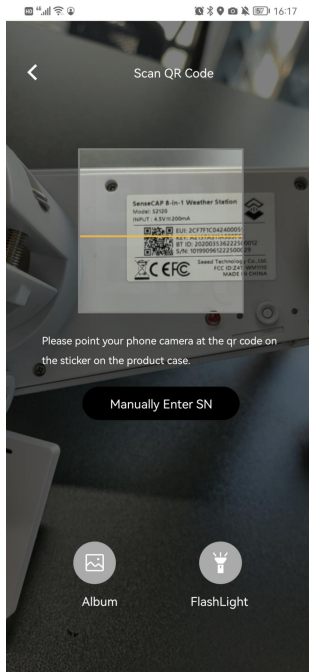

## (2) Manually fill in the EUI

If the QR code sticker is damaged, you can manually fill in the EUI of the device to bind the device to your account. Please make sure you put in the EUI in the format suggested by the system and then click “confirm”.

1:58 4G


< Entering Device

First EUI Line  (6/16)

Second CODE Line

1	2	3
4	5	6
7	8	9
A	B	C
D	E	F
Clear	0	Delete


Confirm

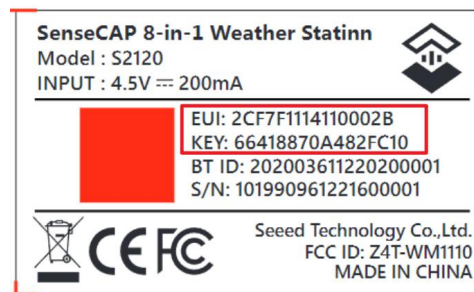




## 7.2.4 Setup the Sensor

- 1) Open the SenseCAP Mate App
- 2) Please click the “Setup” button to turn on Bluetooth and click “Scan” to start scanning the sensor's Bluetooth.

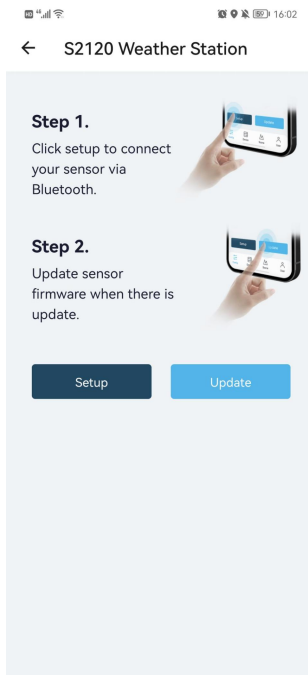

- 3) Select the Sensor by BT ID (label). Then, the basic information of the sensor will be displayed after entering.

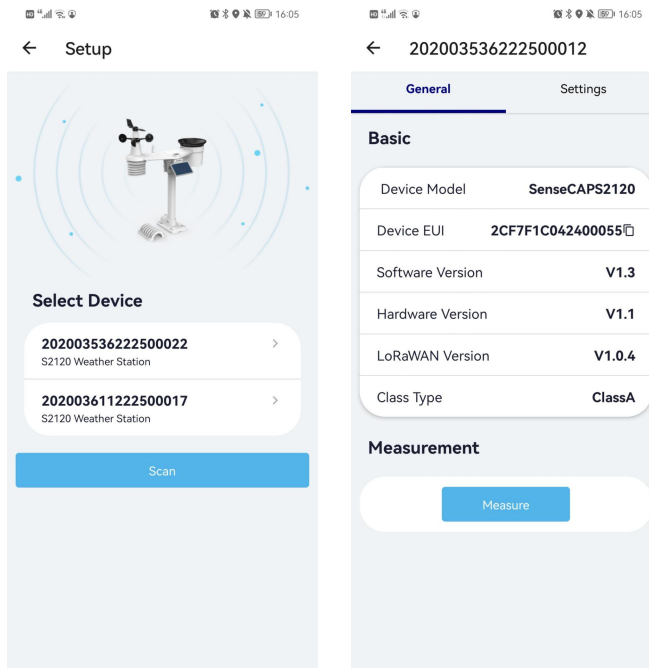




## 7.2.5 Set Frequency of Sensor via SenseCAP Mate App


Set the corresponding frequency band based on the frequency band of the gateway.

Please refer to [section 6](#) for detail.

- 1) Click the “Setting” and select the platform is “SenseCAP for Helium”.

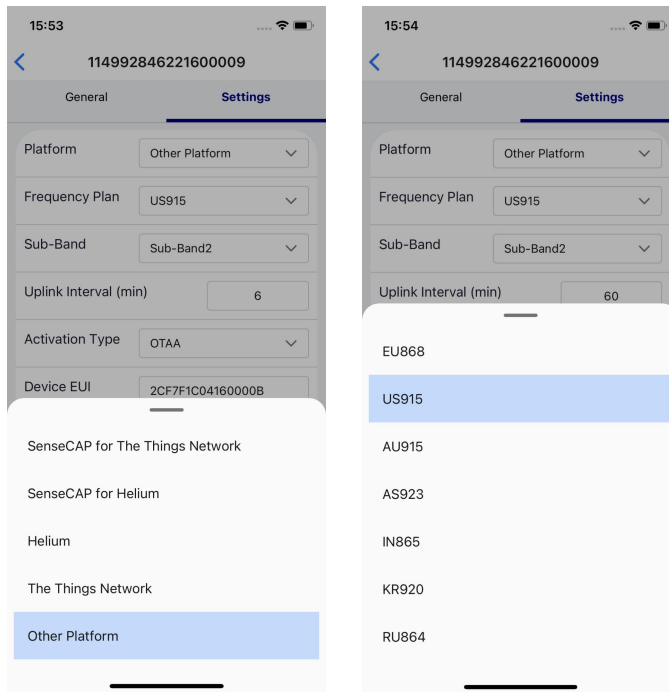

- 2) Select the Frequency Plan, if the gateway is US915, set the sensor to US915.
- 3) Click the “Send” button, send the setting to the sensor for it to take effect.

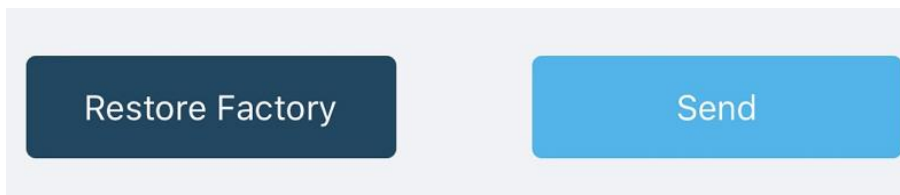

- 4) Click the “Home” button, the App will disconnect the Bluetooth connection.  
Then, the sensor will reboot.
- 5) When the device is disconnected from Bluetooth, the LED flashes as a **breathing light**.
- 6) After joining the network successfully, LED **flashes fast for 2s**.



## 7.2.6 Check Data on SenseCAP Portal

On the SenseCAP App or the website <http://sensecap.seeed.cc/>, you can check the device online status and the latest data. In the list for each Sensor, you can check its online status and the time of its last data upload.

The screenshot shows the SenseCAP web portal interface. On the left is a sidebar with navigation options: Dashboard, Devices (selected), Gateway, Node Group, Sensor Node, Data, Table, Graph, Security, and Access API keys. The main content area is titled 'Devices / Sensor Node' and includes filters for All, LoRa, and NB-IoT. Below the filters are input fields for EUI, Device Group, Frequency (MHz), and Online Status, along with a registration time range selector. A search button and a 'Clear' button are present. Below the search area, a table lists 4 sensors. The 'Sensor Count' and 'Online Status' columns are highlighted with red boxes. The table data is as follows:

NO.	EUI	Device Name	Sensor Count	Device Group	Online Status	Operation	Last Message Time
1	2CF7F12210400070	CO2 Sensor	1	station-1	Online	<a href="#">Move</a>	2019-11-15 10:28:16
2	2CF7F12210400074	Barometric Pressure Sensor	1	station-1	Online	<a href="#">Move</a>	2019-11-15 10:09:27
3	2CF7F1221040007E	Light Intensity Sensor	1	station-1	Online	<a href="#">Move</a>	2019-11-15 09:43:47
4	2CF7F12210400083	Air Temperature and Humidity Sensor	1	station-1	Online	<a href="#">Move</a>	2019-11-15 10:02:47


The screenshot shows the SenseCAP mobile app interface. At the top, there are tabs for All, Default, and Home. Below the tabs, it says '6 Device'. The main area displays a grid of six device cards, each with a sensor icon, name, EUI, status (Online/Offline), and a battery level indicator (100%). The devices are: Air TH -Home, Light Intensity, Weather Station, CO2, Temp&Humi, Soil Moisture, Te..., and Soil TH-Home. At the bottom, there are three icons: Config, Device, and User.



## 7.3 Connect to SenseCAP with private TTN

### 7.3.1 Quick Start

Follow this process to quickly use the sensor, see the following section for details.

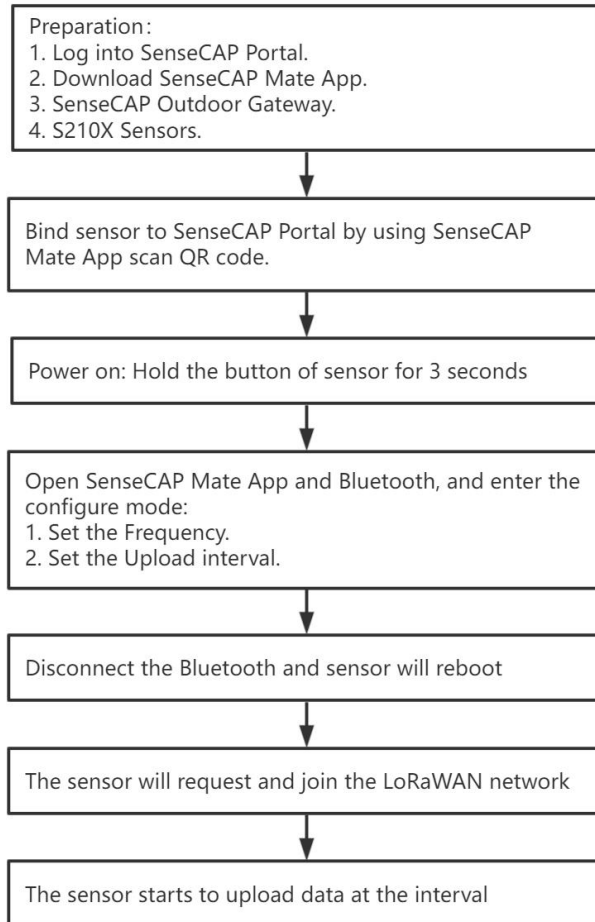

### 7.3.2 Preparation

#### 1) SenseCAP Mate App

Download the App, please refer to [section 6](#) for using.

#### 2) SenseCAP Outdoor Gateway

Now, the sensor needs to be used with the SenseCAP Outdoor Gateway (<https://www.seeedstudio.com/LoRaWAN-Gateway-EU868-p-4305.html>) to transmit data to the SenseCAP Portal.


- Setup the Gateway, connect to power cable and Internet.
- Bind the gateway to SenseCAP Portal.



- c) Ensure the gateway indicator is steady on.



- d) Ensure the gateway is displayed online on the portal.



### 7.3.3 Bind Sensor to SenseCAP Portal

Please refer to the [section 7.2.3](#)

### 7.3.4 Setup the Sensor


Please refer to the [section 7.2.4](#)

### 7.3.5 Set Frequency of Sensor via SenseCAP Mate App


Set the corresponding frequency band based on the frequency band of the gateway.

Please refer to [section 6](#) for detail.

- 1) Click the “Setting” and select the platform is “SenseCAP for The Things Network”.

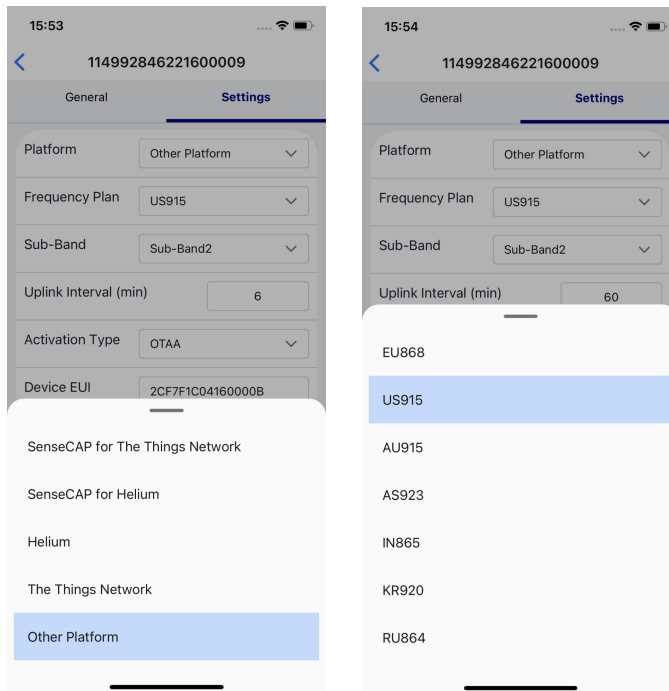

- 2) Select the Frequency Plan, if the gateway is US915, set the sensor to US915.
- 3) Click the “Send” button, send the setting to the sensor for it to take effect.

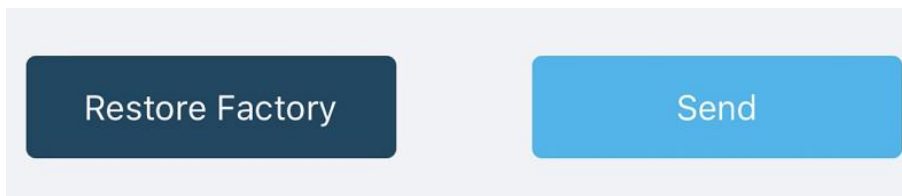

- 4) Click the “Home” button, the App will disconnect the Bluetooth connection.  
Then, the sensor will reboot.
- 5) When the device is disconnected from Bluetooth, the LED flashes as a **breathing light**.
- 6) After joining the network successfully, LED **flashes fast for 2s**.

### 7.3.6 Check Data on SenseCAP Portal

Please refer to the [section 7.2.6](#)



## 8. Connect to Helium Network

Please refer to the manual to connect sensors to Helium public console:

<https://files.seeedstudio.com/products/SenseCAP/S210X/How%20to%20Connect%20SenseCAP%20S210X%20to%20Helium%20Network.pdf>

## 9. Connect to The Things Network

Please refer to this manual:

<https://files.seeedstudio.com/products/SenseCAP/S210X/How%20to%20Connect%20SenseCAP%20S210X%20to%20The%20Things%20Network.pdf>

Please refer to the link to use the TTN platform:

The Things Network website: <https://www.thethingsnetwork.org>

The Things Industries login: <https://accounts.thethingsindustries.com/login>

TTN Quick Start: <https://www.thethingsnetwork.org/docs/quick-start/>



## 10. Payload Decoder

### 10.1 Decoder Code

TTN payload decoding script for SenseCAP LoRaWAN:

[https://github.com/Seeed-Solution/SenseCAP-Decoder/blob/main/S2120/TTN/SenseCAP\\_S2120\\_TTN\\_Decoder.js](https://github.com/Seeed-Solution/SenseCAP-Decoder/blob/main/S2120/TTN/SenseCAP_S2120_TTN_Decoder.js)

Helium Decoder:

[https://github.com/Seeed-Solution/SenseCAP-Decoder/blob/main/S2120/Helium/SenseCAP\\_S2120\\_Helium\\_Decoder.js](https://github.com/Seeed-Solution/SenseCAP-Decoder/blob/main/S2120/Helium/SenseCAP_S2120_Helium_Decoder.js)

ChirpStack V3

[https://github.com/Seeed-Solution/SenseCAP-Decoder/blob/main/S2120/ChirpStack/SenseCAP\\_S2120\\_ChirpStackV3\\_Decoder.js](https://github.com/Seeed-Solution/SenseCAP-Decoder/blob/main/S2120/ChirpStack/SenseCAP_S2120_ChirpStackV3_Decoder.js)



## 10.2 Packet Parsing

After being powered on or reboot, SenseCAP Sensors will be connected to the network using the OTAA activation method. Each Sensor Node will send data packets to the server, including the following data:

Before the firmware v2.0, the weather station data protocol provides 6 types of packets to correspond to different information such as measurements, and the number of bytes of each packet may vary. The structure of the frame is shown in the image below. The frame content is sent in **big-endian byte order**.

01	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	Byte 10	Byte 11
ID	Temperature	Humidity	Light Intensity				UV	Wind Speed		

02	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9
ID	Wind Direction		Rainfall Intensity				Barometric Pressure	

03	Byte 2
ID	Battery Level

04	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	Byte 10
ID	Battery Level	Software & Hardware Version				Measurement Uplink Interval		GPS Uplink Interval (reserved)	

05	Byte 2	Byte 3	Byte 4	Byte 5
ID	Measurement Uplink Interval		GPS Uplink Interval (reserved)	

06	Byte 2
----	--------



ID	Error Code
----	------------

After the firmware v2.0, the weather station data protocol provides 7 types of packets. The changes were to change the ID names of IDs 01 and 02 to 4A, 4B, and to add 4C, which records the values of Peak Wind Gust and Accumulated Rain.

4A	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8	Byte9	Byte10	Byte11
ID	Temperature	Humidity	Light Intensity					UV	Wind Speed	

4B	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8	Byte9
ID	Wind Direction		Rainfall Intensity				Barometric Pressure	

4C	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
ID	Peak Wind Gust		Cumulative Rainfall			



## 10.3 Data Parsing Example

### 10.3.1 Measurement data packets

Measurements list:

Measurements	Resolution	Unit
Air Temperature	0.1	°C
Air Humidity	1	%RH
Light Intensity	1	Lux
UV Index	0.1	(None)
Wind Speed	0.1	m/s
Wind Direction	0.1	°
Rainfall Intensity	0.001	mm/hour
Barometric Pressure	1	Pa
Peak Wind Gust	0.1	m/s
Cumulative Rainfall	0.254	mm

#### Before the v2.0 firmware

The raw payload: 010115410000005E000000020156000000FE2703

01 0115 41 0000005E 05 0011 02 0156 000000FE 2703

Part	Value	Raw Data	Description
1	Frame ID 01	01	01 is the frame ID.
2	Air Temperature	0115	0115 is actually 0x0115 ( <b>signed number</b> ), whose equivalent decimal value is 277. Divide it by 10, and you will get the actual value for air Temperature as 27.7 °C.
3	Air Humidity	41	41 is actually 0x41( <b>unsigned number</b> ), whose equivalent decimal value is 65. You will get the actual value for air humidity as 65%RH.



4	Light Intensity	0000005E	0000005E is actually 0x5E( <b>unsigned number</b> ), whose equivalent decimal value is 94. You will get the actual value for light intensity as 94 Lux.
5	UV Index	05	05 is actually 0x05( <b>unsigned number</b> ), whose equivalent decimal value is 5. Divide it by 10, You will get the actual value for UV index as 0.5.
6	Wind Speed	0011	0011 is actually 0x11( <b>unsigned number</b> ), whose equivalent decimal value is 17. Divide it by 10, you will get the actual value for Wind Speed as 1.7 m/s.
7	Frame ID 02	02	02 is the frame ID.
8	Wind Direction	0156	0156 is actually 0x0156( <b>unsigned number</b> ), whose equivalent decimal value is 342. You will get the actual value for wind direction as 342° .
9	Rainfall Intensity	000000FE	000000FE is actually 0x000000FE ( <b>unsigned number</b> ), whose equivalent decimal value is 254. Divide it by 1000, you will get the actual value for rainfall intensity as 0.254 mm/hour.
10	Barometric Pressure	2703	2703 is actually 0x2703 ( <b>unsigned number</b> ), whose equivalent decimal value is 9987. Multiply it by 10, you will get the actual value for barometric pressure as 99870 Pa.

### After the v2.0 firmware

The raw payload:

4A007F320000000000000084B00420000000027554C000B000006F2

4A0115410000005E0500114B0156000000FE27034C000B000006F2

Part	Value	Raw Data	Description
1	Frame ID 4A	4A	4A is the frame ID.
2	Air	0115	0115 is actually 0x0115 ( <b>signed number</b> ),



	Temperature		whose equivalent decimal value is 277. Divide it by 10, and you will get the actual value for air Temperature as 27.7 °C.
3	Air Humidity	41	41 is actually 0x41( <b>unsigned number</b> ), whose equivalent decimal value is 65. You will get the actual value for air humidity as 65%RH.
4	Light Intensity	0000005E	0000005E is actually 0x5E( <b>unsigned number</b> ), whose equivalent decimal value is 94. You will get the actual value for light intensity as 94 Lux.
5	UV Index	05	05 is actually 0x05( <b>unsigned number</b> ), whose equivalent decimal value is 5. Divide it by 10, You will get the actual value for UV index as 0.5.
6	Wind Speed	0011	0011 is actually 0x11( <b>unsigned number</b> ), whose equivalent decimal value is 17. Divide it by 10, you will get the actual value for Wind Speed as 1.7 m/s.
7	Frame ID 4B	4B	4B is the frame ID.
8	Wind Direction	0156	0156 is actually 0x0156( <b>unsigned number</b> ), whose equivalent decimal value is 342. You will get the actual value for wind direction as 342° .
9	Rainfall Intensity	000000FE	000000FE is actually 0x000000FE ( <b>unsigned number</b> ), whose equivalent decimal value is 254. Divide it by 1000, you will get the actual value for rainfall intensity as 0.254 mm/hour.
10	Barometric Pressure	2703	2703 is actually 0x2703 ( <b>unsigned number</b> ), whose equivalent decimal value is 9987. Multiply it by 10, you will get the actual value for barometric pressure as 99870 Pa.
11	Frame ID 4C	4C	4C is the frame ID.
12	Peak Wind Gust	000B	000B is actually 0x000B ( <b>unsigned number</b> ), whose equivalent decimal value is 11. Divide it by 10, you will get the actual value for Peak Wind Gust as 1.1



			m/s.
13	Cumulative Rainfall	000006F2	000006F2 is actually 0x000006F2 ( <b>unsigned number</b> ), whose equivalent decimal value is 1778. Divide it by 1000, you will get the actual value for Cumulative Rainfall as 1.778 mm.

### 10.3.2 Battery information packets

A packet of battery information will be uploaded when the device is powered on or reboot for the first time. Thereafter, the battery information will be uploaded once a day.

The first pack of battery information is uploaded together with software, hardware version, measurements information and etc.

The raw payload (Combined data packet):

04 64 01010103 000A D5A0 010110430000000000000000 02011A0000000002702

Part	Value	Raw Data	Description
1	Frame ID 04	04	04 is the frame ID.
2	Battery Level	64	64 is actually 0x64 ( <b>signed number</b> ), whose equivalent decimal value is 100. You will get the actual value for battery level as 100.  Batteries have only two states: a value of 0 means they may only last for 1~2 weeks. A value of 100 means the battery is sufficient.
3	Hardware and Software Version	01010103	01010103 is actually 0x01010103 ( <b>unsigned number</b> ). HW.HW-SW.SW 0101: HW 1.1 0103: SW 1.3
4	Measurement Uplink Interval	000A	000A is actually 0x000A ( <b>unsigned number</b> ), whose equivalent decimal value is 10. You will get the actual value for Measurement Uplink Interval as 10 minutes.



5	GPS Uplink Interval (reserved)	05A0	<p>05A0 is actually 0x05A0(<b>unsigned number</b>), whose equivalent decimal value is 1440. You will get the actual value for GPS Uplink Interval as 1440 minutes.</p> <p>GPS is used in the customized version. The common version does not have the GPS function.</p>
6	Measurements packet of 01 and 02	010110430000000000000000 02011A0000000002702	Please refer to 01/02 packets.

The raw payload (Combined data packet):

01011043000000000000000002011A000000002702 03 64

Part	Value	Raw Data	Description
1	Measurements packet of 01 and 02	010110430000000000000000 02011A0000000002702	Please refer to 01/02 packets.
2	Frame ID 03	03	03 is the frame ID.
3	Battery Level	64	<p>64 is actually 0x64 (<b>signed number</b>), whose equivalent decimal value is 100. You will get the actual value for battery level as 100.</p> <p>Batteries have only two states: a value of 0 means they may only last for 1~2 weeks. A value of 100 means the battery is sufficient.</p>



## 11. LoRaWAN Downlink Command

### 11.1 Set the Data Uplink Interval

- (1) Using the Network Server's portal or API to send downlink command, then the Node will respond to the ack. The downlink command takes effect and responds the next time the node uploads data.
- (2) Downlink as follow:

0x00	0x90	0x00	collect_duty_L	collect_duty_H	0x01	reserve_L	reserve_H	crc-L	crc-H
------	------	------	----------------	----------------	------	-----------	-----------	-------	-------

0x00	Fixed field
0x90	Fixed field
0x00	Fixed field
collect_duty_L	Data interval low byte, you can set the data interval, unit: minute
collect_duty_H	Data interval high byte, you can set the data interval, unit: minute
0x01	Fixed field
reserve_L	Reserved field, default set to A0
reserve_H	Reserved field, default set to 05
crc-L	CRC low byte, it's calculated by the CRC-16/KERMIT
crc-H	CRC high byte, it's calculated by the CRC-16/KERMIT

- (3) When you send the downlink command, the Node responds to the ack command.

0x00	collect_duty_H	collect_duty_L	reserve_H	reserve_L
------	----------------	----------------	-----------	-----------

0x00	Fixed field
collect_duty_H	Data interval high byte
collect_duty_L	Data interval low byte
reserve_H	Reserved field, default set to 05
reserve_L	Reserved field, default set to A0

- (3) Use the FPort = 2

CRC Tool: <https://crccalc.com/> , select Hex input and the algorithm of CRC-16/KERMIT.

Example: Set the Node's data interval is 10 minutes.



Send the downlink command (HEX) via FPort=2:

**00 90 00 0A 00 01 A0 05 5F 32**

0x00	0x90	0x00	collect_ duty_L	collect_ duty_H	0x01	Reserve_L	Reserve_H	crc- L	crc- H
00	90	00	0A	00	01	A0	05	5F	32

ACK Response via FPort=3:

**05 00 0A 05 A0**

0x05	collect_duty_H	collect_duty_L	reserve_H	reserve_L
05	00	0A	05	A0

### Command List:

Description	Command (HEX)	Command (Base64)
Set Uplink interval = 1 minute	009000010001A0051E9A	AJAAAQABoAUemg==
Set Uplink interval = 5 minutes	009000050001A0050EB7	AJAABQABoAUOtw==
Set Uplink interval = 10 minutes	0090000A0001A005F2DD	AJAACgABoAXy3Q==
Set Uplink interval = 15 minutes	0090000F0001A005A6FB	AJAADwABoAWm+w==
Set Uplink interval = 20 minutes	009000140001A0050A08	AJAFAABoAUKCA==
Set Uplink interval = 30 minutes	0090001E0001A005A244	AJAAHgABoAWiRA==
Set Uplink interval = 60 minutes	0090003C0001A005BB32	AJAAPAABoAW7Mg==



## 11.2 Reboot the device

FPort = 2

Command: 00C8000000000002B26

## 11.3 How to send downlink

Example: use the Helium Console to send

### Add Downlink Payload

Scheduling

First

Last

FPort

2

Region

US915

Payload

AJAACgABoAXy3Q==

Base64Text

☒ I'd like confirmation of response



## 12. Device Installation

### 12.1 Select an Appropriate Installation Location


Before installing the weather station, please consider the followings:

- 1) Rain gauge must be clean every few months.
- 2) Avoid radiant heat reflected from any adjacent buildings and structures. Ideally, the weather station should be installed at 1.5m (5') from any building, structure, ground or roof top.
- 3) Choose an area of open space in direct sunlight without any obstruction of rain, wind, and sunlight.
- 4) Transmission range between weather station and gateway could reach a distance of 2~10 km at line of sight, providing there are no interfering obstacles in between or nearby such as trees, towers, or high voltage line. Check the reception signal quality to ensure good reception.
- 5) Household appliance such as fridge, lighting, dimmers may pose Electro-magnetic interference (EMI), while Radio Frequency Interference (RFI) from devices operating in the same frequency range may cause signal intermittent. Choose a location at least 1-2 meter (3-5 feet) away from these interference sources to ensure best reception.

### 12.2 Installing the Weather Station

#### 12.2.1 Adjust the solar panel

The tilting angle of solar panel can be adjusted vertically from 0° into 15°, 30°, 45° and 60° positions depending on the area you are living in. For optimal power output year-round, please set the tilt angle that is closest to your latitude.

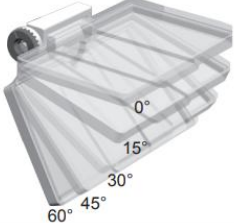
Location (latitude, longitude)	Solar panel tilt angle	
Hamburg (53.558, 9.7874)	60°	
Chicago (42.1146, -88.0464)	45°	
Houston (29.7711, -95.3552)	30°	
Bangkok (14.2752, 100.5684)	15°	
Sydney (-33.5738, 151.3053) *	30°	

\*Sensors installed in Southern Hemisphere must have their solar panels facing North.


**Step 1:** Remove the solar panel protection film.




**Step 2:** Loosen the screw lightly until the gears on the opposite side separated from lock position.

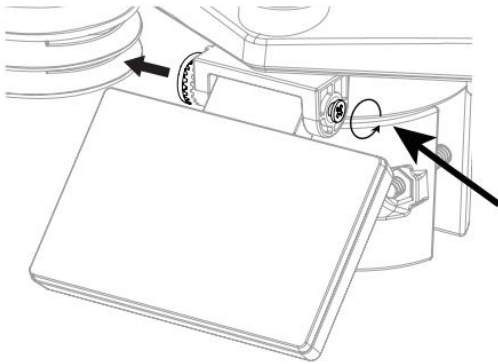

**Step 3:** Adjust the vertical angle of the solar panel (0°, 15°, 30°, 45°, 60°) according to the latitude of your location.

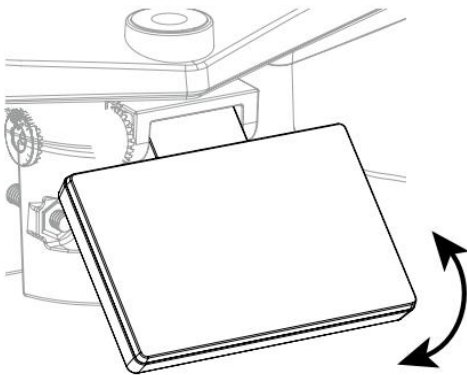


**Step 4:** Push the gear and tighten the screw until the gears are securely locked.

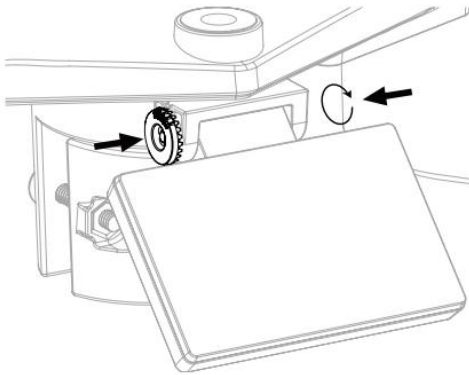


### 12.2.2 Install the Mounting Pole

**Step 1:** Fasten the plastic pole onto your fix pole with mounting base, clamp, washers, screws and nuts. Following below sequences:


- 1) Insert the plastic pole into the hole of the mounting stand, and then secure it with the screw and nut.

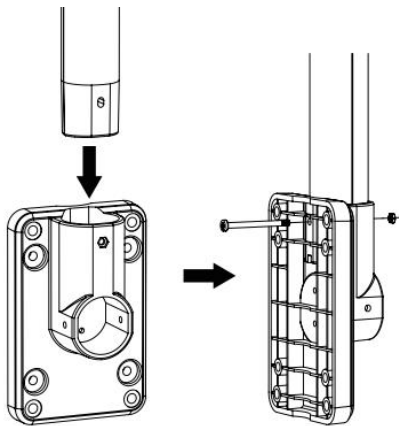


- 2) Apply 2 rubber pads on the mounting clamp.

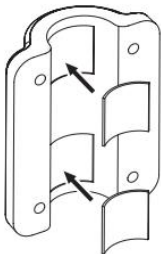

- 3) Fasten the mounting stand and clamp together onto a fix pole with 4 long screws and nuts.

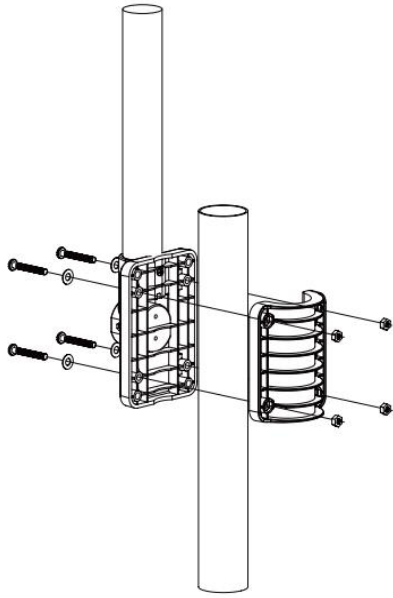

**Step 2:** Apply 2 rubber pads on the inner sides of the mounting base and clamp of the weather station, and loosely fasten them together.

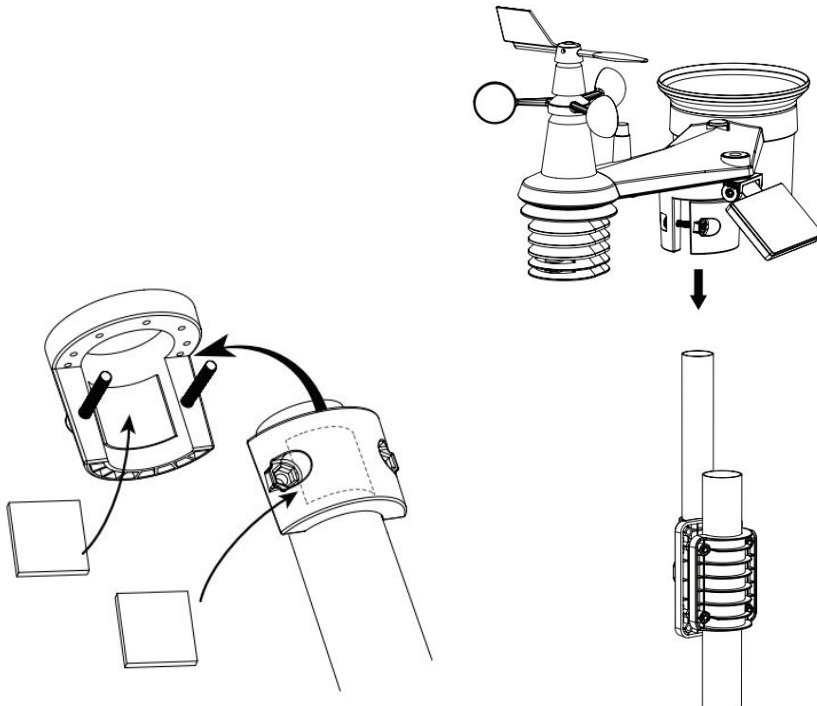

**Step 3:** Place the weather station over the mounting pole and align it to North direction before fastening the screws.



**Note:**




1. *Any metal object can attract lightning strikes, including the mounting pole. Never install weather station in stormy days.*
  2. *If you want to install a weather station on a house or building, consult a licensed electrical engineer to ensure proper grounding. Direct lightning impact on a metal pole can damage or destroy your home.*
  3. *Installing the sensor at high location may result in personal injury or death. Perform as many initial inspections and operations as possible on the ground and in buildings or houses. Only install the weather station on clear, dry days.*
- 

### 12.2.3 Direction Alignment

Install the weather station in an open location with no obstructions above and around the sensor for accurate rain and wind measurement.

Locate the North (N) marker on top of the weather station and align the marker to point North upon final installation with a compass or GPS. Tighten the mounting bracket around a 30 to 40 mm diameter pole (not included) using two screw and nuts provided.


Use the bubble level on the weather station to make sure the sensor is completely level for proper measurement of rainfall intensity, UV and light intensity.

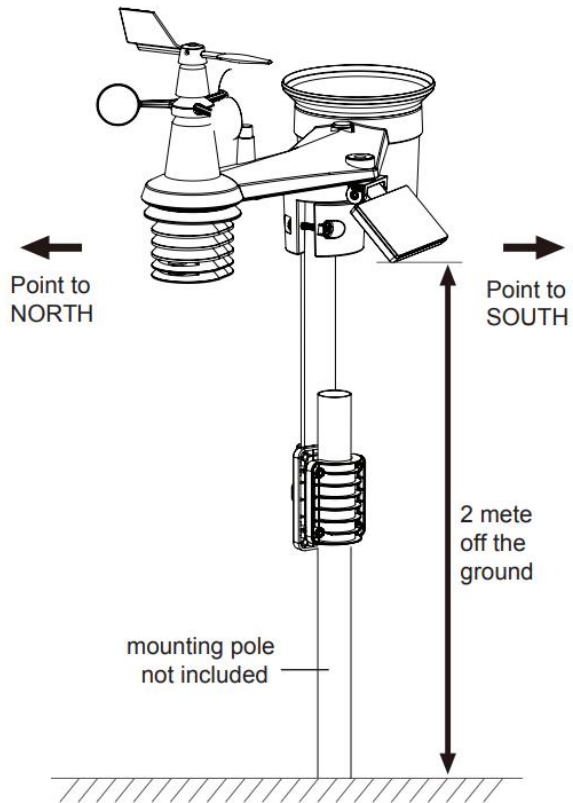

#### 12.2.4 Recommendation for best wireless communication

Effective wireless communication is susceptible to noise interference in the environment, and distance and barriers between the sensor transmitter and the gateway.

- 1) Installation direction. When installing equipment, in addition to the direction of wind direction, also need to consider the direction of wireless transmission. In the direction shown, pointing to the gateway will get a better signal.

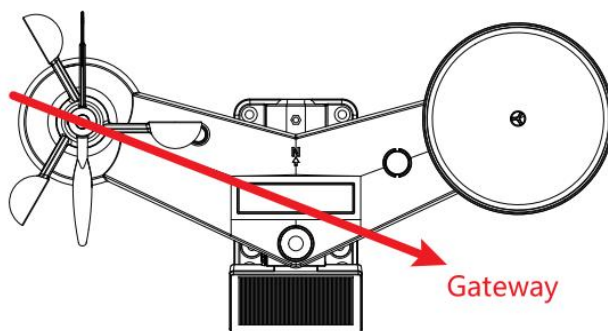



- 2) Distance. Path loss occurs naturally with distance. This device is rated to 10km by line of sight (in interference free environment and without barriers). However, typically you will get 1~3km maximum in real life installation, which includes passing through barriers.
- 3) Barriers. Radio signal are blocked by metal barriers such as aluminum cladding. Please align the weather station and gateway to get them in clear line of sight through window if you have metal cladding.


The table below show a typical level of reduction in signal strength each time the signal passed through these building materials (RF signal reduction for reference):

Materials	Signal strength reduction
Glass (untreated)	10 ~ 20%
Wood	10 ~ 30%
Plasterboard / drywall	20 ~ 40%
Brick	30 ~ 50%
Foil insulation	60 ~ 70%
Concrete wall	80 ~ 90%
Aluminum siding	100%
Metal wall	100%



## 13. Trouble Shooting

### 13.1 Maintenance of Weather Station

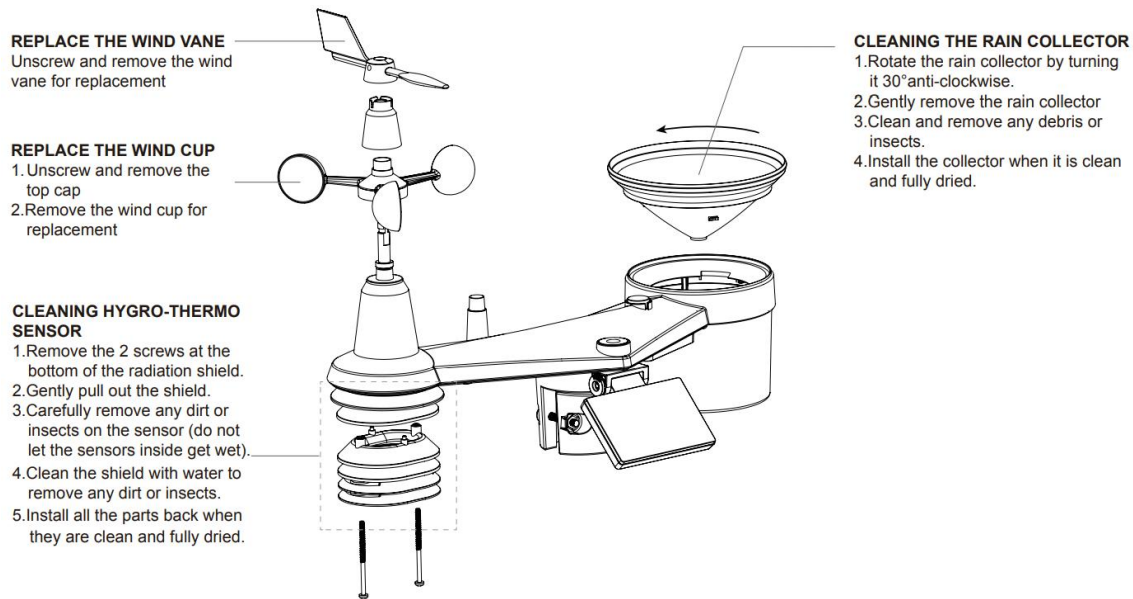

### 13.2 Sensors can't join LoRa network, how to do?

- 1) Check the gateway frequency configuration. Make sure the gateway and sensor have the same uplink and downlink frequency.
- 2) Check the real-time log and click config button of the sensor to see if there are any sensor data packets. If there are packets, check whether the gateway is sending downlink packets.
- 3) If the channels and other configurations are correct and the gateway logs do not have packets, please contact technical support.

### 13.3 How to obtain the cumulative rainfall from the past ten minutes?


- 1) Connect S2120 to SenseCAP Mate App and set the uplink interval to 10 min.
- 2) Divide the uploaded rainfall intensity by 6 to get the cumulative rainfall from the past ten minutes.

*The uploaded rainfall intensity data (mm/h) of S2120 is derived by multiplying the cumulative rainfall (mm) from the past ten minutes by 6. Therefore, setting the interval to 10 min will provide the actual cumulative rainfall value.*



Alternatively, you can use the [S700](#)+ [S2100](#) to check the cumulative rainfall directly.

## 13.4 The wind direction degrees and corresponding direction diagram

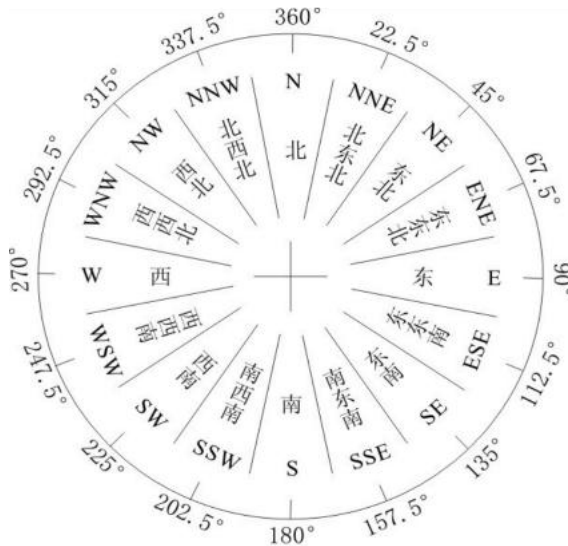

## 13.5 Battery Life Prediction

The power consumption table is for reference only. The battery life depends on various factors, such as frequency band, distance from the gateway, and ambient temperature.

[https://files.seeedstudio.com/products/SenseCAP/S210X/SenseCAP\\_S21XX\\_Sensor\\_Battery\\_Life\\_Prediction.xlsx](https://files.seeedstudio.com/products/SenseCAP/S210X/SenseCAP_S21XX_Sensor_Battery_Life_Prediction.xlsx)

## 13.6 Support

Support is provided Monday to Friday, from 09:00 to 18:00 GMT+8. Due to different time zones, we cannot offer live support. However, your questions will be answered as soon as possible in the before-mentioned schedule.

Provide as much information as possible regarding your enquiry (product models, accurately describe your problem and steps to replicate it etc.) and send a mail to: [support@sensecapmx.com](mailto:support@sensecapmx.com)



## 13.7 Document Version

Version	Date	Description	Editor
V1.0.0	5/01/2022	First edition	Jenkin Lu
V1.0.1	10/25/2022	Modify the description of the downlink command	Jenkin Lu
V1.0.2	6/5/2022	Add more Q&A in trouble shooting	Andrea Ouyang
V1.0.3	2/12/2024	Add information about v2.0 firmware: payload, decoder	Zeke Cai
V1.0.4	5/2/2025	"4C" packet corrected to 7 bytes, remove the hint about calibration	Zeke Cai