DATA SHEET




Zirconia O₂ Sensors Metric Probe Series—Screw Fit Housing

FEATURES

- Zirconium dioxide (ZrO₂) sensing elements
- Long life, non-depleting technology
- Integral heating element
- High accuracy
- Requires an external interface board to operate¹



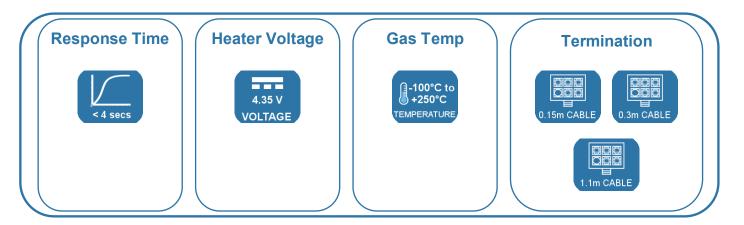

BENEFITS

- No reference gas required
- No need for temperature stabilisation
- Variety of probe mounting positions available; 28mm, 45mm & 55mm

2)

3)

M18x1.5 screw mounting

ar valta aa²

X TECHNICAL SPECIFICATIONS

Healer vollage
Operating
Standby
Pump impedance at 700°C ³
Permissible gas temperature
Gas flow rate
Repetitive permissible acceleration
Incidental permissible acceleration
Mounting thread

NOTES

 $4.35V_{DC} \pm 0.1V_{DC} (1.85A)$ $2V_{DC} (0.85A)$ $< 6k\Omega$ $-100^{\circ}C \text{ to } +250^{\circ}C$ 0-10 m/s 5g 30gM18 x 1.5

OUTPUT VALUES

Oxygen pressure range	2mbar—3bar max
Accuracy	5mbar max
Internal operational temp	700°C
Response time (10—90% step)	< 4s
Warm up time (prior to sensor operation)	60s
Warm up time (from standby)	20s
Output stabilisation time	~ 180s

Other sensor options available on request, email: technical@sstsensing.com

> Need help? Ask the expert Tel: + 44 (0)1236 459 020 and ask for "Technical"



Interface board sold separately; contact <u>technical@sstsensing.com</u> for details.


It is important to measure the heater voltage as close to the sensor as possible due to voltage drops in the supply cable. The constant current source used in the pump circuit should be designed to drive a load of up to $6k\Omega$.

\square OUTLINE DRAWING AND MOUNTING INFORMATION

All dimensions shown in mm.


Molex mating connector 39-01-2061 (plastic plug) 39-00-0041 (pins)

X= 55mm for O2S-FR-T2-18A X= 48mm for O2S-FR-T2-18B X= 28mm for O2S-FR-T2-18C

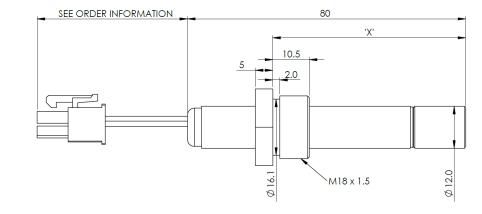

×

Baffle to protect sensor from direct gas flow and possible contamination

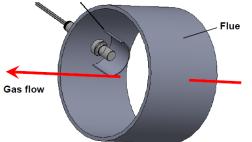


ELECTRICAL INTERFACE

Molex Connector

3	2	1
\bigcirc	\bigcirc	\bigcirc
	U	Q
	5	4

Pin	Designation
1	Pump (Red)
2	Common (Black)
3	Heater (1) (Yellow)
4	Sense (Blue)
5	Heater (2) (Yellow)

Generate your specific part number using the convention shown below. Use only those letters and numbers that correspond to the sensor options you require — omit those you do not.

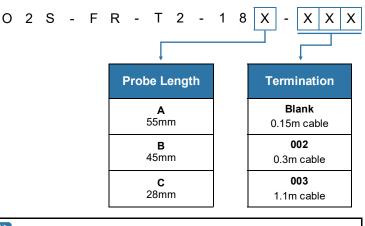

DS-0053 REV 7

Do not exceed maximum ratings and ensure sensor(s) are operated in accordance with their requirements.

Carefully follow all wiring instructions. Incorrect wiring can cause permanent damage to the device.

Zirconium dioxide sensors are damaged by the presence of silicone. Vapours (organic silicone compounds) from RTV rubbers and sealants are known to poison oxygen sensors and MUST be avoided. Do NOT use chemical cleaning agents.

Failure to comply with these instructions may result in product damage.

As customer applications are outside of SST Sensing Ltd.'s control, the information provided is given without legal responsibility. Customers should test under their own conditions to ensure that the equipment is suitable for their intended application.

For detailed information on the sensor operation refer to application note AN0043 Operating Principle and Construction of Zirconium Dioxide Oxygen Sensors.

For technical assistance or advice, please email: technical@sstsensing.com

General Note: SST Sensing Ltd. reserves the right to make changes to product specifications without notice or liability. All information is subject to SST Sensing Ltd.'s own data and considered accurate at time of going to print.



© 2020 SST SENSING LTD.