



Hot Film Anemometer Component

- * Highly reliable and long term stable
- Uni-directional airflow measurement
- Fast reaction time
- Manufactured according ISO TS16949
- Can be adapted to various flow channel geometries
- Can be used for almost all kind of gases and volatile substances

LMM-H04 Mass Air FLow Sensor

Product Description

LMM-H04 is a thermodynamic sensing element for the unidirectional measurement of mass air flow in a well defined channel. It is dedicated for applications with high reliability requirements such as medical or industrial gas flow applications. Mounted directly within the flowing media the LMM-H04 is sensitive against the heat transfer on a micrometer scale. This heat transfer is detected by a micro-machined silicon device which is mounted on ceramic substrate defining the geometry of the sensing element.

The functional principle of the LMM-H04 is a hot film anemometer, which is the thin film version of the hot wire anemometer. A thin film heating element (heater) is heated to a defined temperature difference with respect to the air. At zero flow there is heat dissipation due to the thermal conductivity of the air. With applied flow the heat dissipation increases steadily with the flow rate.

The sensing element can be operated at Constant Power and Constant Voltage mode. However, it is recommended to operate LMM-H04 in the described Constant Temperature Difference (CTD) mode. In the CTD mode the electronics detects any change of the thermal equilibrium very quickly and compensates it by adjusting the power settings through the heaters. This allows a very reliable mass flow measurement with a very short time constant which is in the order of milliseconds.,

Features

- Highly reliable and long term stable
- Fast reaction time
- Can be adapted to various flow channel geometries
- Can be used for almost all kind of gases and volatile substances

Applications

- Engine Control
- Industrial gas flow measurement
- Leak detection in pressurized air systems
- Spirometer

Absolute Maximum Ratings

Parameter	Symbol	Condition	Min	Тур	Мах	Unit
Storage Temperature	T _{Store}	after bonding, with protected bond bads	-40	+25	+125	°C
Storage Temperature	T _{Store}	before bonding, unprotected bond bads	+10	+25	+40	°C
Maximum Current	I _{max}	at now flow, +25 °C ambient	_	_	20	mA


Operation Conditions

Parameter	Symbol	Condition	Min	Тур	Мах	Unit
Operation Temperature	T _{Store}	after bonding, with protected bond bads	-40	+25	+125	°C
Heater Overtemperature	与T _{Heater}	$rac{}{\Rightarrow} T_{Heater} = T_{Heater} - T_{air}$		100	120	К

Sensing Properties

Parameter	Symbol	Condition	Min	Тур	Мах	Unit
Resistance Ambient Temperature Sensor 1	R _{ATS1}	<i>Pad 1+2, T_{Amb}</i> = +25 °C	650	850	1050	ų.
Resistance Heater	R _{Heater1}	<i>Pad 3+4, T_{Amb} = +25 °C</i>	40.0	45.0	50.0	ç
Resistance Ambient Temperature Sensor 2	R _{ATS2}	<i>Pad 5+6, T_{Amb} = +25 °C</i>	1300	1700	2100	ç
Temperature Coefficient R _{ATS} and R _{Heater}	¢	measurement at $T_1 = 0$ °C and $T_2 = +100$ °C	5500	6000	6500	ppm/K
TCR Match	<i>≒≓</i>	measurement at $T_1 = 0$ °C and $T_2 = +100$ °C	-	_	100	ppm/K

Mechanical Dimensions

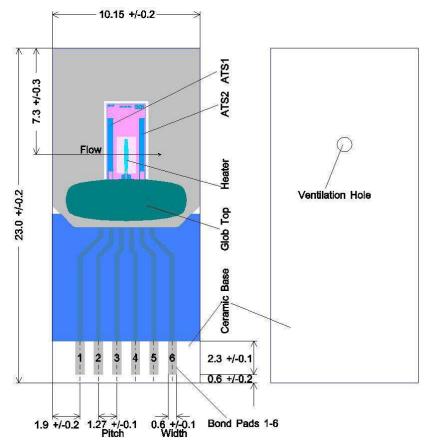




The sensor membrane has a thickness of about $\sim 2 \,\mu$ m. Therefore it should not be exposed to any mechanical stress. One has to take care of a filter unit around the measurement device. High speed particles coming direct to the surface of the membrane can result in damages or shortage of the life time. The ventilation holes shall be kept open to release air pressure built up due to heating.


Parameter	Symbol	Condition	Min	Тур	Мах	Unit
Package Type			Hybride Ceramics			
Height Ceramics	H _{ceramics}	+25 °C	0.48	0.63	0.78	mm
Height Ceramics + Metall	H _{Flow}	+25 °C	0.9	1.1	1.2	mm
Heigth max. Overall	H _{Total}	+25 °C	_	_	1.8	mm
Pad Material		bondable with 150 μm Al-wire, also solderable	AgPt			

Application Example

One application of the LMM-H04 is to measure the amount of air coming into an engine. The actual mass air flow sensor module consists of a flow channel and a measurement channel, the so called Venturi channel. The measurement channel with the LMM-H04 should be placed in the center of the flow channel because at this place the flow is almost laminar and the flow velocity reaches its maximum. The cross sections of both channels can be adjusted to the amount of air which is supposed to be measured. For reproducible measurement results it is strictly required to avoid any turbulence at the surface of the sensing element.

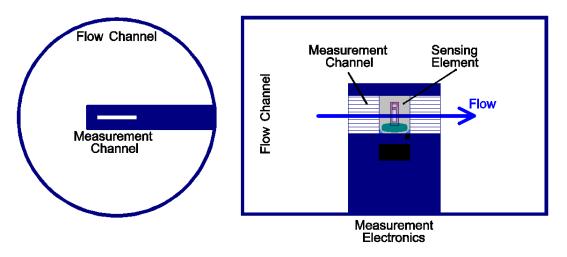

Flow channel of application example of a mass air flow sensor

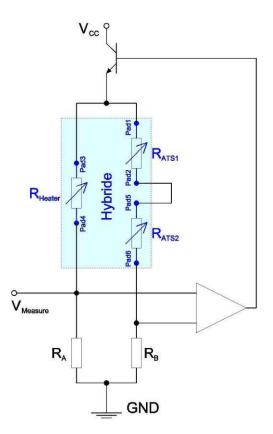

Above is shown an example of a measurement electronics using a Wheatstone-bridge. The resistors R_A and R_B need to be trimmed to operate the heater at a defined over-temperature

NOTE: This drawing shows only the basic functionality. This is not a ready to use circuit diagram!

Ordering Information

Description	Part Number
SENSORHYBRID LMM H04	G-MAFCO-004

NORTH AMERICA

Measurement Specialties, Inc., a TE Connectivity Company 1711 139th Lane NW Andover, MN 55304 Tel: +1 763 689 4870 Fax: +1 763 689 5033

customercare.ando@te.com

EUROPE

MEAS Deutschland GmbH a TE Connectivity Company Hauert 13 44227 Dortmund Germany Tel : +49 231 9740-0 Fax : +49 231 9740-20

customercare.dtmd@te.com

ASIA

Measurement Specialties (China), Ltd., a TE Connectivity Company No. 368 Wulian 1st Road Gongxing Town Shuangliu, Chengdu Sichuan, 610200 China Tel: +86 (0) 28 8573 9088 Fax: +86 (0) 28 8573 9070

customercare.chdu@te.com

te.com/sensorsolutions

Measurement Specialties, Inc., a TE Connectivity company.

Measurement Specialties, MEAS, TE Connectivity, TE Connectivity (logo) and EVERY CONNECTION COUNTS are trademarks. All other logos, products and/or company names referred to herein might be trademarks of their respective owners.

The information given herein, including drawings, illustrations and schematics which are intended for illustration purposes only, is believed to be reliable. However, TE Connectivity makes no warranties as to its accuracy or completeness and disclaims any liability in connection with its use. TE Connectivity's obligations shall only be as set forth in TE Connectivity's Standard Terms and Conditions of Sale for this product and in no case will TE Connectivity be liable for any incidental, indirect or consequential damages arising out of the sale, resale, use or misuse of the product. Users of TE Connectivity products should make their own evaluation to determine the suitability of each such product for the specific application.

© 2016 TE Connectivity Ltd. family of companies All Rights Reserved.

[Model Rev] [Internal ECN]