


MAKING THE INVISIBLE VISIBLE

-with ace 2 X UV Area Scan Cameras

UV cameras allow for a clearer look at tiny details that are invisible to the naked eye. Whether you're inspecting semiconductor patterns or fine scratches on battery films, sorting transparent materials, or delving into bio-imaging, Basler's ace 2 X UV cameras offer new possibilities.

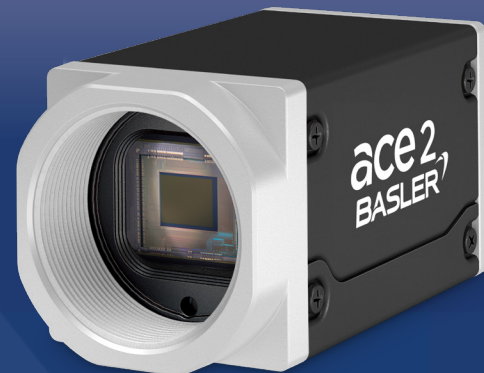

GigE
VISION

USB
VISION

5GigE
VISION

Highlights:

- Interface variety: GigE, USB 3.0 and 5GigE
- High-sensitivity: equipped with Sony IMX487 sensor (Pregius S, BSI)
- With unique Beyond camera features for maximum performance
- Compact in size: 29 mm x 29 mm
- Easy Integration: all components you need in one place, plus easy-to-use pylon software

Cameras: ace 2 X UV

CAMERA MODEL	SENSOR	RESOLUTION [H×VPIXELS]	RESOLUTION [MP]	WAVELENGTH RANGE*	FRAME RATE [FPS]	INTERFACE	PIXEL SIZE [μm²]	OPTICAL SIZE
a2A2840-48umUV	IMX487	2840 x 2840	8.1	0.2– 0.4 μm	48	USB 3.0	2.74 x 2.74	2/3"
a2A2840-14gmUV	IMX487	2840 x 2840	8.1	0.2– 0.4 μm	14	GigE, PoE	2.74 x 2.74	2/3"
a2A2840-67g5mUV	IMX487	2840 x 2840	8.1	0.2– 0.4 μm	67	5GigE	2.74 x 2.74	2/3"

*Recommended wavelength. This camera/sensor can capture images in the range of 0.2- 1.0 μm.

All of your vision products in one place:



Lighting




Filter



Lens




Camera

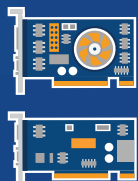

Acquisition



PC

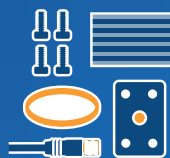

Additional



Software



What is (UV)?




Basler ace 2 X UV cameras are designed and intended to operate in the UV range, though it is capable of imaging in the visible range.




The UV region covers the wavelength range 10 and 400nm. In industrial imaging applications, the range of 290 to 400nm is most commonly used.

What can a UV camera do?

Surface inspection

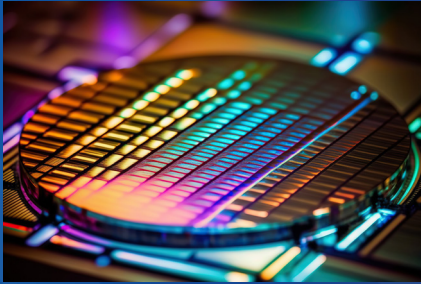

Bio-Imaging

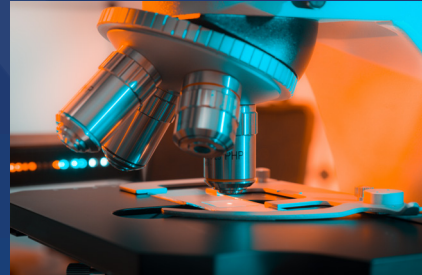

Security Feature Detection



Material Sorting




Designed for UV Imaging

The new Sony IMX487 UV sensor is designed to be highly-sensitive to the UV range.

At the front end, considerations are taken for every layer of materials along the optical path: first a layer of quartz glass for exceptional transparency in the UV range; then the light will hit on a layer of UV-transmissive on-chip lens before reaching the UV-sensing photodiode.

At the back end, the global shutter CMOS sensor utilizes Pregius S back-illuminated pixel structure that puts the wiring layer behind the photodiode for increased sensitivity..

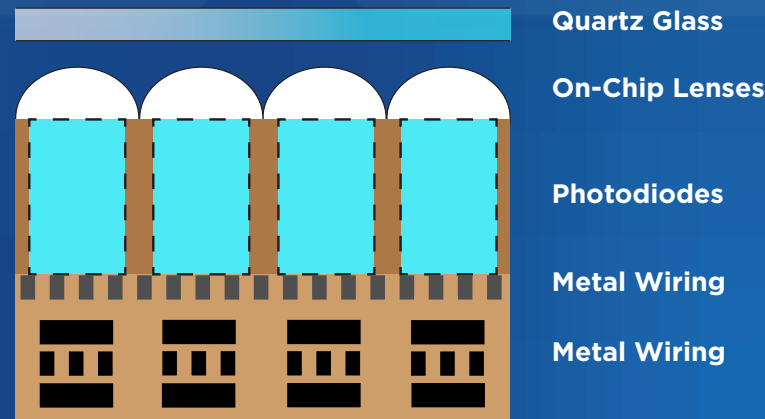

Basler Inc.
Exton, PA USA
Tel. +1 610 280 0171
sales.usa@baslerweb.com

Basler AG
Germany, Headquarters
Tel. +49 4102 463 500
sales.europe@baslerweb.com

Please visit our website to find further Basler offices and representatives close to you:
baslerweb.com/sales

BASLER
the power of sight