



## Constant Current LED Driver

# Model Number AC60CD1.4AP3D

Input Voltage: I20-277V Input Frequency: 50/60Hz Side Mount/Leads Options


#### **ELECTRICAL SPECIFICATIONS:**

Output Power	Input Power	Input Current	Min PF (full Ioad)	Max THD (full Ioad)	Output Voltage	Output Current	T case Max	Min Starting Temp <sup>**</sup>	IP Rating	Efficiency Up To	Dimming Protocol	Dimming Range
60VV	70\V	I.6A@I20V 0.26A@277V	>0.9	<20	27-55V	700mA- I400mA	90°C	-40°C	64	86%	0 to 10V	l to 100%

**PHYSICAL:** 

\*\*This driver can operate down to -40 °C in a non-dimming condition. Below 0 °C some flicker may be observed.

## WIRING:

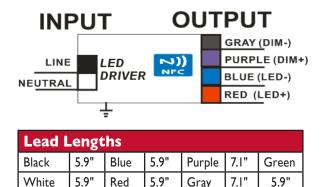



Tref max	Tc/Tref	Ta
Value	Value	Value
90°C	53°C	50°C

### **SAFETY:**

- UL and cUL Recognized
- UL Outdoor Type I
- · Class A sound rating
- Overload Protection
- Open/Short Circuit Protection


#### **INSTALLATION:**

- IP 64
- •Max Remote installation distance is 18 ft

- LED driver has a life expectancy of 50,000 hours at Tcase of ≤75°C
- LED driver has a life expectancy of
- Warranty: 5 yrs based on max case temp
- of <75°C; 3 yrs based on max case temp of 90°C\*
- Input/Output Isolation
- FCC Title 47 CFR Part 15
- Surge Protection (3 KV)

- LED driver cases should be grounded
- 100,000 hours at Tcase of ≤65°C
- - · LED drivers shall be installed inside electrical enclosures
  - 18 AWG 600V/105C tinned stranded copper lead-wires are required for installation

\*AC Electronics/AC LED Power Designs warrants to the purchaser that each LED Driver will be free from defects in material or workmanship for a period of 5 years when operated at max case temp of up to <75°C; 3 years from date of manufacture when operated at a max case temp of up to 90°C when properly installed and under normal conditions of use. See <u>aceleds.com</u> for complete warranty policy.

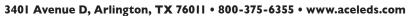

Data is based upon tests performed by AC Electronics in a controlled environment and representative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.




Hot Spot



#### CONTROL THE IOUT WITH THE PROGRAMMING WAND. DOWNLOAD SOFTWARE FROM http://www.aceleds.com/programmable.php

#### **IOUT/VOUT CURVE**

Use with <u>NFC-V Reader</u> App Available Free at Google App Store

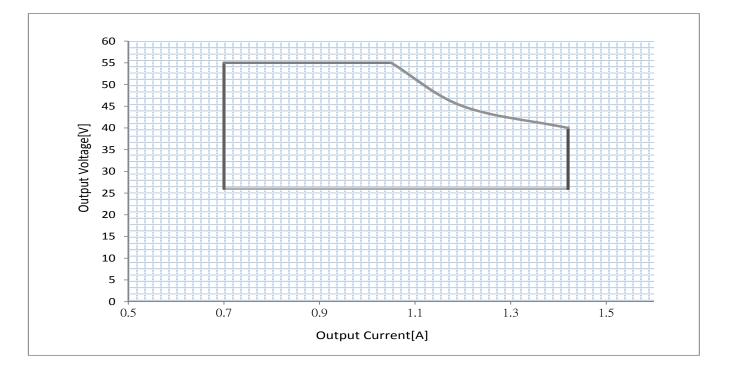

#### **Phone Instructions**

First you must have a Android device (phone/tablet) with NFC-V app downloaded.Open App; then place the device on top of the driver matching up sensors untile it syncs up<br/>Basic formatWriteTo Check: ReadInsert the appropriate code from chart aboveReadWriteShows you the BSuccessfully written will appearThis is where th

To Check: Read Read Shows you the Block - 00 00 00 00 This is where the code you input appears